
Yealink

USB Camera UVC30 Desktop



Quick Start Guide(V1.0)

Package Contents

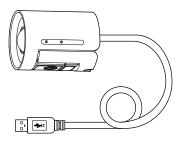









UVC30 Desktop

Drawstring Bag

Camera Lens Privacy Cover


USB 3.0 Type-A Quick Start Guide to Type-C Adapter

We recommend that you use the accessories provided or approved by Yealink. The use of unapproved third-party accessories may result in poor performance.

UVC30 Desktop Installation

Mount on top of a display

Choose the following installation method when the thickness of the display is between 1mm and 50mm.

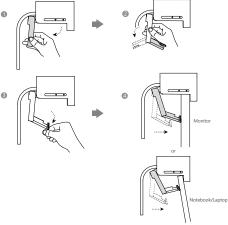

LED Indicator Instructions

LED indicators on the UVC30 Desktop:	
LED Status	Description
Off	The UVC30 Desktop is not properly connected to the mini-PC or the
	UVC30 Desktop is inactive.
Flashing green	There is an incoming call in the client.
Solid green	The UVC30 Desktop is active.
Flashing orange	The UVC30 Desktop is upgrading firmware.
Flashing red	The UVC30 Desktop is in recovery mode and the firmware has not been upgraded.

包装清单



UVC30 Desktop

束口袋

· 镜头盖 US

USB 3.0 Type-A 转Type-C转接头


快速入门指南

我们推荐使用由Yealink提供或经Yealink认可的配件和线缆,使用未经认可的第三方配件和线缆可能会导致性能的下降。

安装UVC30 Desktop

挂装

当显示器厚度范围为1mm-50mm时,进行以下步骤:

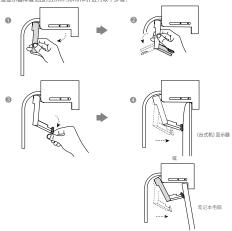

指示灯介绍

UVC30 Desktop指示灯介绍如下:

指示灯状态	说明
灭	UVC30 Desktop没有正确连接到mini-PC上或未处于正常工作状态。
绿灯闪烁	来电中状态。
绿灯常亮	UVC30 Desktop处于正常工作状态。
橙灯闪烁	UVC30 Desktop固件更新中。
红灯闪烁	UVC30 Desktop进入恢复模式,还未固件更新。

4

Regulatory Notices

Operating Ambient Temperatures

Operating temperature: +32 to 104°F (0 to 40°C)

Relative humidity: 5% to 90%, noncondensing Storage temperature: -22 to +160°F (-30 to +70°C)

Storage temperature: -22 to +160°F (-30 to +70°C)
 Warranty
 Warranty is limited only to the unit itself, when used normally

We are not liable for damage or loss resulting from the use of this product, or for any claim from a third party. We are not liable for problems with Yealink device arising from the use of this product; we are not liable for financial damages, lost profits, claims from third parties, etc., arising from

Explanation of the symbols

DC symbol

is the DC voltage symbol.

WEEE Warning symbol
 Yo avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and

as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE seazarathy.

Restriction of Hazardous Substances Directive (RoHS)
All adapter devices comply with the requirements of the EU RoHS Directive.
Statements of compliance can be obtained by contacting support@yealink.com.

Safety Instructions
Save these instructions. Read these safety instructions before use!

General Requirements

• Before you install and use the device, read the safety instructions creation and observe the citization during consistion.

 During the process of storage, transportation, and operation, please always keep the device dry and clean, avoid collision and crash.
 Please attempt not to diamantie the device by yourself. In case of any discrepancy, please crashed the amonified maintenance center for an

Please refer to the relevant laws and statutes while using the device.
 Legal rights of others should be respected as well.
 Environmental Requirements

Place the device at a well-ventilated place. Do not expose the device under direct sunlight.

Keep the device dry and free of dusts.
 Do not place the device on or near any inflammable or fire-vulnerable object, such as subber-made materials.
 Keep the device away from any heat source or bare fire, such as a candle

or an electric heater.

⚠ Operating Requirements

 Do not let a child operate the device without quidance.

Do not let a child play with the device or any accessory in case of accidental smallowing.
 Please use the accessories provided or authorized by the manufactur.

only.

• The power supply of the device shall meet the requirements of the input voltage of the device. Please use the provided surge protection power.

voiliage of the device. Please use the provided surge protection power socket only.

• Before plugging or unplugging any cable, make sure that your hands are

 Before plugging or unplugging any cable, make sure that your hands are completely dry.
 Do not spill liquid of any kind on the product or use the equipment near

basement or near a swerming pool.

During a thunderstorm, stop using the device and disconnect it from th
power supply. Unplug the power plug and the Asymmetric Digital

Subscriber Line (ADSL) twisted pair (the radio frequency cable) to avoid

 If the device is left unused for a rather long time, disconnect it from the power supply and unplus the power plus.

When there is smoke emitted from the device, or some abnormal noise or smell, disconnect the device from the power supply, and unplug the power plug immediately.

Contact the specified maintenance center for repair.

Do not insert any object into equipment slots that is not part of the product or auxiliary product.
 Before connecting a cable, connect the grounding cable of the device.

hist. Do not disconnect the grounding cable until you disconnect all of cables.

Cleaning Requirements

Refere cleaning the desire disconnect if from the preser supply.

Before cleaning the device, disconnect it from the power supply.

Use a piece of soft, dry and anti-static cloth to clean the device.

Keen the power plus clean and dry.

Keep the power plug dean and dry.

Troubleshooting
The unit cannot supply power to device other than Yealink device.

There is a bad connection with the plug.

1. Clean the plug with a dry cloth.

2. Connect it to another wall outlet.

The usage environment is out of operating temperature range.

1. Use in the operating temperature range.

The cable between the unit and Yealink device is connected incorrectly.

1. Connect the rapids cruzeful.

You cannot connect the cable properly.

1. You may have connected a wrong Yealink device.

2. Use the connect proper conference.

Some dust, etc., may be in the port.

1. Clean the port.

Contact your dealer or authorized service facility for any further questions.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may

cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC Statement

This device complies with Industry Canada's licence-exempt RSss. Operation is subject to the following two conditions: (1) this device may not cause interference; and (2) this device must accept any interference, including interference that may cause undesired operation of the device. CAN ICES-3(8)

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantés : (1) l'appareil ne doit pas produire de brouillage;

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioillectrique s même si le brouillage est susceptible d'en compromettre le fonctionnement NMB-3(8) Contact Information

Contact Information

YEALINK NETWORK TECHNOLOGY CO.,LTD.

200, 3rd Roc, No.16, Yun Ding North Road, Hull District, Xiamen City, Fujian, P.R.C.

YEALINK (EUROPE) NETWORK TECHNOLOGY B.V.

STRansinologian 1327, Atron. Building. 18th Story, 130727. Amsterdam, Th. Natherlands.

put Streeningkam 1317, Attento Bulding Bit Root, 20772X Amsterdam, The Netherland YEALBIN (USA) NETWORK TECHNOLOGY CO., LTD. 999 Pactices Street States 2300, Fulton, Adams, GA, 30309, USA area.



About Yealink

Valid is a global basing provider of enterprise communication and collaboration cultures, effering video conferencing service to workdoles enterprises. Excussing on research and development, Valida also insists on innovation and crassion. With the outstanding technical partest of cloud computing, audio, video and maps processing sterhology, Validic has built up a pancamic collaboration solution of adule and avideo conferencing by immigrate cloud services with a series of endopoist products, a none of the best providers in more than 140 countries and regions including the US, the UK and Australia, Validin knot. In the global market share of SP phones Shipments.

Technical Support

Visit Yealink WIKI (http://support.yealink.com/) for the latest firmware, guides, FAQ, Product documents, and more. For better service, we sincerely recommend you to use Yealink Ticketing system (https://bicket.yealink.com) to submit all your technical issues.







Web: www.yealink.com Copyright©2019 YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,LTD.All rights reserved.