



BroadSoft Partner Configuration Guide

Yealink W52P IP DECT Phone

March 2016

Document Version 1.5

9737 Washingtonian Boulevard, Suite 350
Gaithersburg, MD USA 20878
Tel +1 301.977.9440

WWW.BROADSOFT.COM

BroadWorks® Guide

Copyright Notice

Copyright© 2016 BroadSoft, Inc.

All rights reserved.

Any technical documentation that is made available by BroadSoft, Inc. is proprietary and confidential and is considered the copyrighted work of BroadSoft, Inc.

This publication is for distribution under BroadSoft non-disclosure agreement only. No part of this publication may be duplicated without the express written permission of BroadSoft, Inc., 9737 Washingtonian Boulevard, Suite 350, Gaithersburg, MD 20878.

BroadSoft reserves the right to make changes without prior notice.

Trademarks

Any product names mentioned in this document may be trademarks or registered trademarks of BroadSoft or their respective companies and are hereby acknowledged.

This document is printed in the United States of America.

Document Revision History

Version	Reason for Change
1.1	Introduced document for Yealink W52P IP DECT Phone version 25.30.0.10 validation with BroadWorks Release 19.sp1.
1.2	Edited and published document.
1.3	Made minor editorial changes and published document.
1.4	Updated document for Yealink W52P IP DECT Phone version 25.80.193.10 validation with BroadWorks Release 21.sp1.
1.5	Edited changes and published document.

Table of Contents

1	Overview	7
2	Interoperability Status	8
2.1	Verified Versions.....	8
2.2	Interface Capabilities Supported.....	8
2.2.1	SIP Interface Capabilities	9
2.2.1	Other Interface Capabilities.....	13
2.3	Known Issues	15
3	BroadWorks Configuration	16
3.1	BroadWorks Device Profile Type Configuration	16
3.2	BroadWorks Configuration Steps	17
4	W52P IP DECT PHONE Configuration	18
4.1	Configuration Method	18
4.2	System Level Configuration	18
4.3	Subscriber Level Configuration.....	19
4.4	SIP Advanced Feature Configuration.....	20
4.4.1	Shared Call Appearance Configuration.....	20
4.4.2	Busy Lamp Field Configuration.....	23
4.4.3	Feature Key Synchronization Configuration	23
4.4.4	Call Center Feature Configuration	24
4.4.5	Call Recording Feature Configuration	24
4.4.6	Security Classification Feature Configuration	24
4.4.7	Emergency Call Configuration	24
4.4.8	Advice of Charge Configuration.....	25
4.5	Extended Services Interface (Xsi) Feature Configuration	25
4.5.1	BroadWorks User Service Configuration	28
4.5.2	BroadWorks Directory Configuration.....	29
4.5.3	BroadWorks Call Logs Configuration	30
4.5.4	BroadWorks Call Park Configuration.....	31
4.6	Instant Message and Presence Configuration.....	32
4.7	Connected Line Presentation on UPDATE or Re-Invite	32
5	Device Management	34
5.1	Device Management Capabilities Supported	34
5.2	Device Management Configuration.....	35
5.2.1	Configure BroadWorks Tags	36
5.2.2	Configure BroadWorks Device Profile Type	39
5.2.3	Create Device Profile Instance	47
5.2.4	Configure BroadWorks User.....	48
5.2.5	Configure Edge Device	49
5.2.6	Configure Yealink W52P IP DECT PHONE	49

5.3 Upgrade from Previous CPE Kits	51
Appendix A: Reference W52P Configuration Files	52
Appendix B: %TIMEZONENAME% Values.....	101
References	104

Table of Figures

Figure 1 Device Identity/Profile Type.....	17
Figure 2 Shared Call Appearance Configuration.....	21
Figure 3 Feature Key Synchronization Configuration.....	24
Figure 4 Emergency Configuration.....	25
Figure 5 Xtended Services Interface Configuration.....	26
Figure 6 Xtended Services Platform Account Configuration.....	27
Figure 7 Xtended Services Platform Configuration.....	28
Figure 8 Call Logs Configuration.....	31
Figure 9 Call Park Configuration.....	32
Figure 10 Connected Line Presentation on Update or Re-Invite.....	33
Figure 11 System Default Tag Settings.....	38
Figure 12 Device Type Specific Tag Settings.....	39
Figure 13 Device Access FQDN.....	40
Figure 14 y00000000025.cfg system File.....	43
Figure 15 %BWMACADDRESS%.cfg File.....	44
Figure 16 Static File Settings.....	45
Figure 17 Device Profile Instance.....	47
Figure 18 Device Profile Instance Custom Tags Override.....	48
Figure 19 Device Profile Instance Custom Tags Add.....	48
Figure 20 Login Screen.....	50
Figure 21 Auto Provision Screen.....	50

1 Overview

This guide describes the configuration procedures required for the Yealink W52P IP DECT Phone for interoperability with BroadWorks. The W52P IP DECT Phone supports the following two handsets:

- W52H
- W56H

The W52P IP DECT Phone is an IP phone that uses the Session Initiation Protocol (SIP) to communicate with BroadWorks for call control.

This guide describes the specific configuration items that are important for use with BroadWorks. It does not describe the purpose and use of all configuration items on the W52P IP DECT Phone. For those details, see the *Yealink W52P IP DECT Phone User Guide* [1] supplied by Yealink.

2 Interoperability Status

This section provides the known interoperability status of the Yealink W52P IP DECT PHONE with BroadWorks. This includes the version(s) tested, capabilities supported and known issues.

Interoperability testing validates that the device interfaces properly with BroadWorks via the SIP interface. Qualitative aspects of the device or device capabilities not affecting the SIP interface such as display features, performance, and audio qualities are not covered by interoperability testing. Requests for information and/or issues regarding these aspects should be directed to Yealink.

2.1 Verified Versions

The following table identifies the verified Yealink W52P IP DECT PHONE and BroadWorks versions and the month/year the testing occurred. If the device has undergone more than one test cycle, versions for each test cycle are listed, with the most recent listed first.

Compatible Versions in the following table identify specific W52P IP DECT PHONE versions which the partner has identified as compatible and should interface properly with BroadWorks. Generally, maintenance releases of the validated version are considered compatible and are not specifically listed here. For any questions concerning maintenance and compatible releases, contact Yealink.

NOTE: Interoperability testing is usually performed with the latest generally available (GA) device firmware/software and the latest GA BroadWorks release and service pack at the time the testing occurs. If there is a need to use a non-verified mix of BroadWorks and device software versions, customers can mitigate their risk by self-testing the combination themselves using the *BroadWorks SIP Phone Interoperability Test Plan* [\[5\]](#).

Verified Versions			
Date (mm/yyyy)	BroadWorks Release	W52P IP DECT PHONE Verified Version	W52P IP DECT PHONE Compatible Versions
03/2016	Release 21.sp1	W52P: 25.80.193.10 W52H: 26.73.0.11 W56H: 61.80.0.10	None
04/2013	Release 19.sp1	25.30.0.10	None

2.2 Interface Capabilities Supported

This section identifies interface capabilities that have been verified through testing as supported by Yealink W52P IP DECT PHONE.

The *Supported* column in the tables in this section identifies the Yealink W52P IP DECT PHONE's support for each of the items covered in the test plan, with the following designations:

- Yes Test item is supported

- No Test item is not supported
- NA Test item is not applicable to the device type
- NT Test item was not tested

Caveats and clarifications are identified in the *Comments* column.

2.2.1 SIP Interface Capabilities

The Yealink W52P IP DECT PHONE has completed interoperability testing with BroadWorks using the *BroadWorks SIP Phone Interoperability Test Plan* [5]. The results are summarized in the following table.

The BroadWorks test plan is composed of packages, each covering distinct interoperability areas, such as “Basic” call scenarios and “Redundancy” scenarios. Each package is composed of one or more test items, which in turn are composed of one or more test cases. The test plan exercises the SIP interface between the device and BroadWorks with the intent to ensure interoperability sufficient to support the BroadWorks feature set.

NOTE: *DUT* in the following table refers to the *Device Under Test*, which in this case is the Yealink W52P IP DECT PHONE.

BroadWorks SIP Phone Interoperability Test Plan Support Table			
Test Plan Package	Test Plan Package Items	Supported	Comments
Basic	Call Origination	Yes	
	Call Termination	Yes	
	Session Audit	Yes	
	Session Timer	Yes	
	Ringback	Yes	
	Forked Dialog	Yes	
	181 Call Being Forwarded	Yes	
	Dial Plan	Yes	
	DTMF – Inband	Yes	
	DTMF – RFC 2833	Yes	
	DTMF – DTMF Relay	Yes	
	Codec Negotiation	Yes	
	Codec Renegotiation	Yes	
BroadWorks Services	Third-Party Call Control – Basic	Yes	
	Third-Party Call Control – Advanced	No	
	Voice Message Deposit/Retrieval	Yes	
	Message Waiting Indicator	Yes	Except for saved and urgent message information.
	Voice Portal Outcall	Yes	
	Advanced Alerting – Ringing	No	

BroadWorks SIP Phone Interoperability Test Plan Support Table

Test Plan Package	Test Plan Package Items	Supported	Comments
	Advanced Alerting – Call Waiting	No	
	Advanced Alerting – Ring Splash	No	
	Advanced Alerting – Silent Alerting	No	
	Calling Line ID	Yes	
	Calling Line ID with Unicode Characters	Yes	
	Connected Line ID	Yes	
	Connected Line ID with Unicode Characters	Yes	
	Connected Line ID on UPDATE	Yes	
	Connected Line ID on Re-INVITE	Yes	
	Diversion Header	Yes	
	History-Info Header	Yes	
	Advice of Charge	No	
	Meet-Me Conferencing	Yes	
	Meet-Me Conferencing – G722	Yes	
	Meet-Me Conferencing – AMR-WB	No	
	Collaborate – Audio	Yes	
	Collaborate – Audio – G722	Yes	
	Call Decline Policy	Yes	
DUT Services – Call Control Services	Call Waiting	Yes	
	Call Hold	Yes	
	Call Transfer	Yes	
	Three-Way Calling	Yes	Before answer scenario is not supported.
	Network-Based Conference	Yes	
DUT Services – Registration and Authentication	Register Authentication	Yes	
	Maximum Registration	Yes	
	Minimum Registration	Yes	
	Invite Authentication	Yes	
	Re-Invite/Update Authentication	Yes	
	Refer Authentication	Yes	
	Device Authenticating BroadWorks	No	
DUT Services – Emergency Call	Emergency Call	NT	
	Emergency Call with Ringback	NT	
	Do Not Disturb	Yes	

BroadWorks SIP Phone Interoperability Test Plan Support Table

Test Plan Package	Test Plan Package Items	Supported	Comments
DUT Services – Miscellaneous	Call Forwarding Always	Yes	
	Call Forwarding Always Diversion Inhibitor	Yes	
	Anonymous Call	Yes	
	Anonymous Call Block	Yes	
	Remote Restart Via Notify	Yes	check-sync
Advanced Phone Services – Busy Lamp Field	Busy Lamp Field	No	
	Call Park Notification	Yes	
Advanced Phone Services – Feature Key Synchronization, Private Line	Do Not Disturb	Yes	
	Do Not Disturb Ring Splash	Yes	
	Call Forwarding	Yes	
	Call Forwarding Always Ring Splash	Yes	
	Call Forwarding Always Diversion Inhibitor	Yes	
	Call Center Agent Logon/Logoff	No	
	Call Center Agent Unavailable Code	No	
	Executive – Call Filtering	No	
	Executive-Assistant – Call Filtering	No	
	Executive-Assistant – Diversion	No	
	Call Recording	No	
	Security Classification	No	
Advanced Phone Services – Feature Key Synchronization, Shared Line	Do Not Disturb	Yes	
	Do Not Disturb Ring Splash	Yes	
	Call Forwarding	Yes	
	Call Forwarding Always Ring Splash	Yes	
	Call Forwarding Always Diversion Inhibitor	Yes	
	Security Classification	No	
Advanced Phone Services – Missed Calls Display Synchronization	Missed Calls Display Sync	Yes	
Advanced Phone Services – Shared Call Appearance using Call Info	Line-Seize	Yes	Except cancel and refresh line-seize.
	Call-Info/Lamp Management	Yes	
	Public Hold	Yes	
	Private Hold	Yes	No Button for retrieving the private-held call.

BroadWorks SIP Phone Interoperability Test Plan Support Table

Test Plan Package	Test Plan Package Items	Supported	Comments
	Hybrid Key System	No	
	Multiple Call Arrangement	Yes	
	Bridge Active Line	Yes	
	Bridge Active Line – Silent Monitor	No	
	Call Park Notification	Yes	
Advanced Phone Services – Call Park Notification	Call Park Notification	Yes	
Advanced Phone Services – Call Center	Hold Reminder	No	
	Call Information	No	
	Hoteling Event	No	
	Status Event	No	
	Disposition Code	No	
	Emergency Escalation	No	
	Customer Originated Trace	No	
Advanced Phone Services – Call Recording Controls	Pause/Resume	No	
	Start/Stop	No	
	Record Local Conference	No	
	Record Network Conference	No	
Advanced Phone Services – Call Recording Video	Basic Call	No	
	Record Local Conference	No	
	Record Network Conference	No	
Advanced Phone Services – Security Classification	Security Classification	No	
Advanced Phone Services – Conference Event	Network-Based Conference Creator	No	
	Network-Based Conference Participant	No	
	Meet-Me Conference Participant	No	
Redundancy	DNS SRV Lookup	Yes	
	Register Failover/Failback	Yes	
	Invite Failover/Failback	Yes	
	Bye Failover	Yes	
SBC/ALG – Basic	Register	Yes	
	Outgoing Invite	Yes	
	Incoming Invite	Yes	
	Register Failover/Failback	Yes	

BroadWorks SIP Phone Interoperability Test Plan Support Table			
Test Plan Package	Test Plan Package Items	Supported	Comments
SBC/ALG – Failover/Failback	Invite Failover/Failback	Yes	
Video – Basic Video Calls	Call Origination	No	
	Call Termination	No	
	Call Hold	No	
	Call Waiting	No	
	Call Transfer	No	
Video – BroadWorks Video Services	Auto Attendant	No	
	Auto Attendant – HD	No	
	Voice Messaging	No	
	Voice Messaging – HD	No	
	Custom Ringback	No	
Video – BroadWorks Video Conference	Network-based Conference	No	
	Network-based Conference – HD	No	
	Collaborate – Video	No	
	Collaborate – Video – HD	No	
TCP	Register	Yes	
	Outgoing Invite	Yes	
	Incoming Invite	Yes	
IPV6	Call Origination	No	
	Call Termination	No	
	Session Audit	No	
	Ringback	No	
	Codec Negotiation/Renegotiation	No	
	Voice Message Deposit/Retrieval	No	
	Call Control	No	
	Registration with Authentication	No	
	Busy Lamp Field	No	
	Redundancy	No	
	SBC	No	
	Video	No	
	Dual Stack with Alternate Connectivity	No	

2.2.1 Other Interface Capabilities

The Yealink W52P IP DECT PHONE may have implemented support for the following:

- BroadWorks Xtended Services Interface (Xsi)
- Extensible Messaging and Presence Protocol (XMPP) (BroadCloud/BroadWorks Collaborate Instant Messaging and Presence [IM&P])

Support for these interfaces is demonstrated by completing the *BroadWorks SIP Phone Functional Test Plan* [6]. Support for these interfaces is summarized in the following table.

BroadWorks Xtended Services Interface (Xsi) and BroadCloud IM&P Support Table			
Interface	Feature	Supported	Comments
Xsi Features – Authentication	Authenticate with SIP Credentials	Yes	
	Authenticate with BroadWorks User Login Credentials	Yes	Default
	Authenticate with BroadWorks User Directory Number	No	
Xsi Features – User Service Configuration	Remote Office	No	
	BroadWorks Anywhere	No	
	Simultaneous Ringing	No	
	Caller ID Blocking	No	
	Call Forwarding Always	No	Via FKS.
	Call Forwarding Busy	No	Via FKS.
	Call Forwarding No Answer	No	Via FKS.
Xsi Features – Directories	Enterprise Directory	Yes	
	Enterprise Common Phone List	Yes	
	Group Directory	Yes	
	Group Common Phone List	Yes	
	Personal Phone List	Yes	
	Search All Directories	Yes	
Xsi Features – Call Logs	Placed Calls	Yes	
	Received Calls	Yes	
	Missed Calls	Yes	
	All Calls	Yes	
	Sort by Name	No	
XMPP Features – Contact/Buddy List	Contacts	No	
	Favorites	No	
	Groups	No	
	Non-XMPP Contacts	No	
	Conferences	No	
XMPP Features – Presence	Login Invisible	No	
	Presence State	No	

BroadWorks Xtended Services Interface (Xsi) and BroadCloud IM&P Support Table			
Interface	Feature	Supported	Comments
	Presence Status	No	
	Contact's Presence State	No	

2.3 Known Issues

This section lists the known interoperability issues between BroadWorks and specific partner release(s). Issues identified during interoperability testing and known issues identified in the field are listed.

The following table provides a description of each issue and, where possible, identifies a workaround. The verified partner device versions are listed with an “X” indicating that the issue occurs in the specific release. The issues identified are device deficiencies or bugs, and are typically not BroadWorks release dependent.

The *Issue Number* is a tracking number for the issue. If it is a Yealink issue, the issue number is from Yealink's tracking system. If it is a BroadWorks issue, the issue number is from BroadSoft's tracking system.

For more information on any issues related to the particular partner device release, see the partner release notes.

Issue Number	Issue Description	Partner Version		
		X:80.193.10		
66520	<p>Network 3-way; Public Hold, Add Party.</p> <p>Network conference transforms to the local conference after retrieving the held call, so it fails to add another party to the network conference.</p> <p>Workaround: None.</p>	X		

3 BroadWorks Configuration

This section identifies the required BroadWorks device profile type for the Yealink W52P IP DECT PHONE as well as any other unique BroadWorks configuration required for interoperability with the W52P IP DECT PHONE.

3.1 BroadWorks Device Profile Type Configuration

This section identifies the device profile type to use when deploying the Yealink W52P IP DECT PHONE with BroadWorks.

Create a device profile type for the Yealink W52P IP DECT PHONE with settings as shown in the following example. A separate device profile type should be created for each Yealink W52P IP DECT PHONE model. The settings shown are recommended for use when deploying the Yealink W52P IP DECT Phone with BroadWorks. For an explanation of the profile parameters, see the *BroadWorks Device Management Configuration Guide* [2].

The device profile type shown provides the *Number of Ports* (number of SIP lines) setting for Yealink W52P IP DECT. For W52P IP DECT PHONE, create a new device profile type and set the *Number of Ports* to match the available number of SIP lines per model according to the following table.

Model	Number of Lines
W52P	5 SIP accounts, 0 line keys

Identity/Device Profile Type Modify

Modify an existing identity/device profile type.

OK
Apply
Delete
Export
Cancel

Identity/Device Profile Type: Yealink_W52P
 Signaling Address Type: Intelligent Proxy Addressing
 Obsolete

Standard Options

Number of Ports: Unlimited Limited To

Ringback Tone/Early Media Support: RTP - Session
 RTP - Early Session
 Local Ringback - No Early Media

Authentication: Enabled
 Disabled
 Enabled With Web Portal Credentials

Hold Normalization: Unspecified Address
 Inactive
 RFC3264

Registration Capable Authenticate REFER
 Static Registration Capable Video Capable
 E164 Capable Use History Info Header
 Trusted

Advanced Options

<input type="checkbox"/> Route Advance	<input type="checkbox"/> Forwarding Override
<input type="checkbox"/> Wireless Integration	<input type="checkbox"/> Conference Device
<input type="checkbox"/> PBX Integration	<input type="checkbox"/> Mobility Manager Device
<input type="checkbox"/> Add P-Called-Party-ID	<input type="checkbox"/> Music On Hold Device
<input type="checkbox"/> Auto Configuration Soft Client	<input type="checkbox"/> Requires BroadWorks Digit Collection
<input type="checkbox"/> Requires BroadWorks Call Waiting Tone	<input type="checkbox"/> Requires MWI Subscription
<input type="checkbox"/> Advice of Charge Capable	<input type="checkbox"/> Support Call Center MIME Type
<input type="checkbox"/> Support Emergency Disconnect Control	<input type="checkbox"/> Support Identity In UPDATE and Re-INVITE
<input type="checkbox"/> Enable Monitoring	<input type="checkbox"/> Support RFC 3398
<input type="checkbox"/> Static Line/Port Ordering	<input type="checkbox"/> Support Client Session Info
<input type="checkbox"/> Support Call Info Conference Subscription URI	<input type="checkbox"/> Support Remote Party Info
<input type="checkbox"/> Support Visual Device Management	<input type="checkbox"/> Bypass Media Treatment
<input type="checkbox"/> Support Cause Parameter	

Reset Event: reSync checkSync Not Supported

Trunk Mode: User Pilot Proxy

Hold Announcement Method: Inactive Bandwidth Attributes

Unscreened Presentation Identity Policy: Profile Presentation Identity
 Unscreened Presentation Identity
 Unscreened Presentation Identity With Profile Domain

Web Based Configuration URL Extension:

Device Configuration Options: Not Supported Device Management Legacy

Figure 1 Device Identity/Profile Type

3.2 BroadWorks Configuration Steps

No additional BroadWorks configuration steps are required.

4 W52P IP DECT PHONE Configuration

This section describes the configuration settings required for the W52P IP DECT PHONE integration with BroadWorks, primarily focusing on the SIP interface configuration. The W52P IP DECT PHONE configuration settings identified in this section have been derived and verified through interoperability testing with BroadWorks. For configuration details not covered in this section, see the *Yealink W52P IP DECT PHONE User Guide* [1]

4.1 Configuration Method

The capabilities of the *W52P IP DECT PHONE* have been verified for use with BroadWorks based on the settings described in the following table. For more information on the meaning, purpose, and applicability of the individual configuration items see the *Yealink W52P IP DECT PHONE User Guide* [1].

Configuration Files

Files Provided by Partner	Level	Description
<code>y000000000<xx>.cfg</code>	system configuration file	"y000000000xx.cfg", where "xx" is associated with the hardware version of Yealink Device.
<code><MACADDRESS>.cfg</code>	device-specific configuration file	

4.2 System Level Configuration

This section describes system-wide configuration items that are generally required for each *W52P IP DECT PHONE* to work with BroadWorks. Subscriber-specific settings are described in the next section.

Step	Command	Purpose
System Configuration Items y000000000<xx>.cfg		
Step 1	Set SIP Proxy/Domain. <code>account.1.sip_server_host = as.broadworks.net</code> <code>account.1.SIPServerPort = 5060</code> <code>account.1.sip_server_type = 2</code>	Set the W52P IP DECT PHONE SIP server to the Fully Qualified Domain Name (FQDN) for the BroadWorks Application Server cluster. The domain must match the domain configured for the BroadWorks subscriber's line/port domain. Set the SIP server type of W52P: Default=0 Broadsoft=2
Step 2	Set Outbound Proxy. <code>account.1.outbound_proxy_enable = 1</code> <code>account.1.outbound_host = sbc.broadworks.net</code> <code>account.1.outbound_port = 5060</code>	Set the Outbound Proxy to the session border controller (SBC) if one is deployed between the W52P IP DECT PHONE and BroadWorks. If there are redundant SBCs, set it to the FQDN for the SBC cluster.
Step 3	Set SIP Timers. <code>sip.timer_t1 = 0.5</code> <code>sip.timer_t2 = 4</code> <code>sip.timer_t4 = 5</code>	The SIP timers should be set to levels short enough to support a timely failover when there is no server response.

Step	Command	Purpose
System Configuration Items y000000000<xx>.cfg		
Step 4	Set Register Expire Timer. account.1.expires = 3600	Set the registration period.
Step 5	Enable reliable response. account.1.100rel_enable = 1	Reliable provisional response (PRACK) should be enabled.
Step 6	Enable Session Timer. account.1.session_timer.enable = 1 account.1.session_timer.expires = 300 account.1.session_timer.refresher = 1	Set the W52P IP DECT PHONE to enable Session Timer. Session Refresher: 0 = uac 1 = uas
Step 7	Enable Call Waiting. call_waiting.enable = 1 call_waiting.tone = 1	Set the W52P IP DECT PHONE series to enable Call Waiting and Call Waiting Tone.
Step 8	Enable MWI. account.1.subscribe_mwi = 0 account.1.subscribe_mwi_expires = 3600	MWI: Solicited when setting SubscribeMWI = 1. MWI: Not solicited when setting SubscribeMWI = 0.
Step 9	Enable negotiated DTMF type. account.1.dtmf.type = 1	Set the W52P IP DECT PHONE to enable inband or RFC 2833 negotiated DTMF.
Step 10	Select Transport Type. account.1.sip_server.1.transport_type = 0	Set the SIP transport: Transport = 0 (UDP) Transport = 1 (TCP) Transport = 2 (TLS) (except T18P) Transport = 3 (DNS-SRV) (except T80P)

4.3 Subscriber Level Configuration

This section identifies the device-specific parameters, including registration and authentication. These settings must be unique across devices to be matched with the settings for a BroadWorks subscriber.

Provisioning a subscriber to register with BroadWorks allows calls to terminate to the subscriber's line. Registration requires that a unique address of record (AoR) is provisioned on BroadWorks and the phone; provisioning an AoR on BroadWorks consists of setting the line/port parameter to a unique value within the Application Server cluster.

Step	Command	Purpose
Subscriber parameters for the <MACADDRESS>.cfg		
Step 1	Enable line 1 to be used. Example: account.1.enable = 1	Enable a line of the W52P IP DECT PHONE to be used.
Step 2	Configure display name for a line. Example: account.1.display_name = Joe	For the line, configure the name to be displayed on the device.

Step	Command	Purpose
Subscriber parameters for the <MACADDRESS>.cfg		
Step 3	Set Register User ID for a line. Example: <pre>account.1.user_name = 2405551111</pre>	The <i>register user ID</i> must correspond with the line/port setting on BroadWorks.
Step 4	Enable SIP Authentication for a line. Example: <pre>account.1.auth_name = 2405551111 account.1.password = 123456</pre>	If the Authentication service is configured on BroadWorks, these parameters must be configured to match the BroadWorks settings.
Step 5	Configure Network Phonebook. <pre>account.1.xsi.host = xsp1.iop1.broad works.net account.1.xsi.user = 2413333601@as.iop1. broadworks.net account.1.xsi.password = yealink</pre>	This configures the phone to use the BroadWorks Xsi interface to retrieve the group phone directory. Host: This is the identity of the BroadWorks Xsp server/cluster address and relevant xsi-actions parameters. User: This is the BroadWorks user's login name. Password: This is the BroadWorks user's login password.

4.4 SIP Advanced Feature Configuration

This section provides configuration instructions for advanced SIP features supported by the phone including but not limited to Shared Call Appearance, Busy Lamp Field, Feature Key Synchronization, Call Center, and Emergency Call.

4.4.1 Shared Call Appearance Configuration

The Shared Call Appearance (SCA) feature allows the administrator to add multiple locations to a given line. Any of the locations can be used to originate or receive calls.

When a call comes in to an idle line, all the provisioned locations for that line are alerted. The first location to answer the call is connected to the originator. If the line is already active in a call, only the active location is alerted.

A subscriber can originate calls from any of the configured locations. All other locations are unable to originate calls until all calls are released.

It is recommended that the phone number plus an index (<phoneNumber>_<index>) is used when provisioning the unique address of record (AoR) for each shared line. For example: 2405551111_2. If a phone number does not exist, the MAC address plus an index could be used (<macAddress>_<index>).

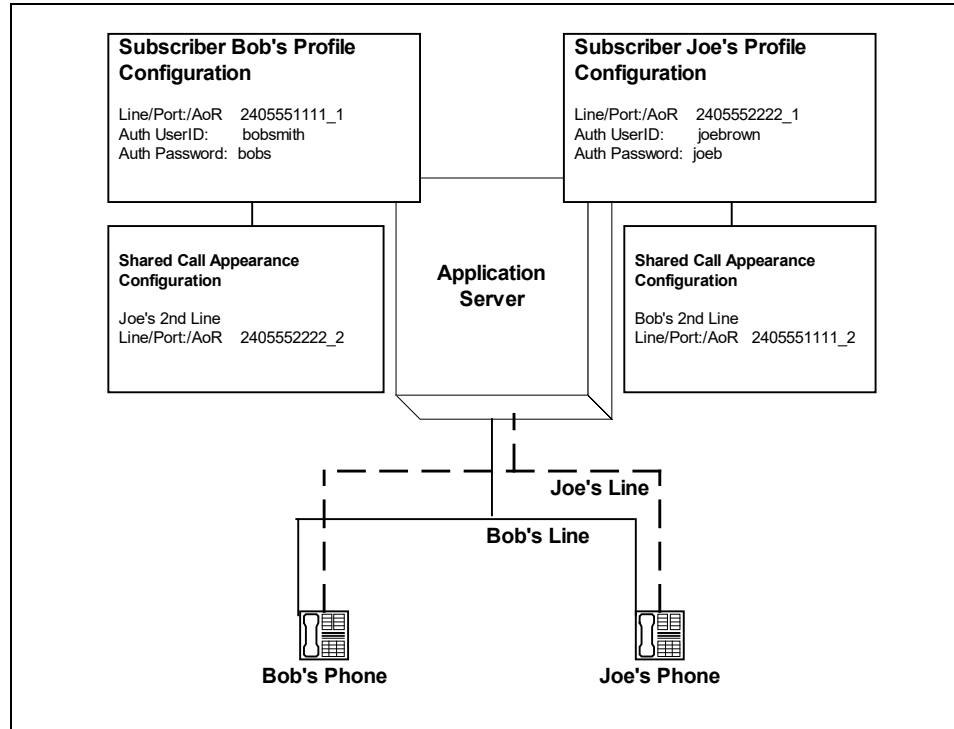


Figure 2 Shared Call Appearance Configuration

Figure 2 shows that Bob and Joe each have two lines and that Bob shares a line with Joe and Joe shares a line with Bob. The figure also shows the applicable Subscriber Profile and Shared Call Appearance Configuration data for subscribers Bob and Joe.

When Bob (2405551111) is called, Bob's first line and Joe's second line will ring. When Joe (2405552222) is called, Joe's first line and Bob's second line will ring.

The following steps show how to configure both phones for this Shared Call Appearance configuration.

For configurations of SCA for the device, refer to the example in the following section.

4.4.1.1 Bob's Phone Configuration – MAC.cfg

This is the SCA configurations as specified in *MAC.cfg*, that is, *0015651130dc.cfg* where "0015651130dc" is the MAC address of the SIP phone.

The following steps are used to configure line 1 for Bob's phone. This line rings when Bob is called, so it has Bob's authentication information.

Step	Command	Purpose
Step 1	Configure line as shared. <code>account.1.shared_line = 1;</code>	Configure the line as "shared" (as opposed to "private").
Step 2	Set Register User ID. Example: <code>account.1.user_name = 2405551111_1;</code>	The register user ID must correspond with the line/port setting on BroadWorks.

Step	Command	Purpose
Step 3	Enable SIP Authentication. Example: account.1.auth_name = bobsmith; account.1.password = bobs;	If the Authentication service is configured on BroadWorks, these parameters must be configured to match the BroadWorks settings. This line rings when Bob is called, so it has Bob's authentication information.
Step 4	Configure display name. Example: account.1.display_name = Bob Smith;	Configure the name to be displayed on the device for this line.

The following steps are used to configure line 2 for Bob's phone. This line rings when Joe is called, so it has Joe's authentication information.

Step	Command	Purpose
Step 1	Configure line as shared. account.2.shared_line = 1;	Configure the line as "shared" (as opposed to "private").
Step 2	Set Register User ID. Example: account.2.user_name = 2405551111_2;	The register user ID must correspond with the line/port setting on BroadWorks.
Step 3	Enable SIP Authentication. Example: account.2.auth_name = joebrown; account.2.password = joeb;	If the Authentication service is configured on BroadWorks, these parameters must be configured to match the BroadWorks settings. This line rings when Joe is called, so it has Joe's authentication information.
Step 4	Configure display name. Example: account.2.display_name = Joe Brown;	Configure the name to be displayed on the device for this line.

4.4.1.2 Joe's Phone Configuration – MAC.cfg

The following steps are used to configure line 1 for Joe's phone. This line rings when Joe is called, so it has Joe's authentication information.

Step	Command	Purpose
Step 1	Configure line as shared. account.1.shared_line = 1;	Configure the line as "shared" (as opposed to "private").
Step 2	Set Register User ID. Example: account.1.user_name = 2405552222_1;	The register user ID must correspond with the line/port setting on BroadWorks.
Step 3	Enable SIP Authentication. Example: account.1.Auth_Name = joebrown; account.1.password = joeb;	If the Authentication service is configured on BroadWorks, these parameters must be configured to match the BroadWorks settings. This line rings when Joe is called, so it has Joe's authentication information.

Step	Command	Purpose
Step 4	Configure display name. Example: <code>account.1.Display_Name = Joe Brown;</code>	Configure the name to be displayed on the device for this line.

The following steps are used to configure line 2 for Joe's phone. This line rings when Bob is called, so it has Bob's authentication information.

Step	Command	Purpose
Step 1	Configure line as shared. <code>account.2.shared_line = 1;</code>	Configure the line as "shared" (as opposed to "private").
Step 2	Set Register User ID. Example: <code>account.2.user_name = 2405552222_2;</code>	The register user ID must correspond with the line/port setting on BroadWorks.
Step 3	Enable SIP Authentication. Example: <code>account.2.Auth_Name = bobsmith;</code> <code>account.2.password password = bobs;</code>	If the Authentication service is configured on BroadWorks, these parameters must be configured to match the BroadWorks settings. This line rings when Bob is called, so it has Bob's authentication information.
Step 4	Configure display name. Example: <code>account.2.Display_Name = Bob Smith;</code>	Configure the name to be displayed on the device for this line.

4.4.1.3 Hybrid Key System Configuration

Yealink W52P IP DECT PHONE does not support Hybrid Key System.

4.4.2 Busy Lamp Field Configuration

Yealink W52P IP DECT PHONE does not support Busy Lamp Field.

4.4.3 Feature Key Synchronization Configuration

Feature Key Synchronization provides synchronization of phone services such as *Call Forwarding* and *Do Not Disturb* with the settings on BroadWorks for the analogous services. Configure the phone to enable Feature Key Synchronization as follows:

Step	Command	Purpose
Step 1	Enable Feature Key Synchronization. Example: <code>bw.feature_key_sync = 1</code>	Enable Feature Key Synchronization feature. <ul style="list-style-type: none"> ▪ 0 for Disabled ▪ 1 for Enable

Browse to *Features* → *General Information* and set Feature Key Synchronization to "Enabled".

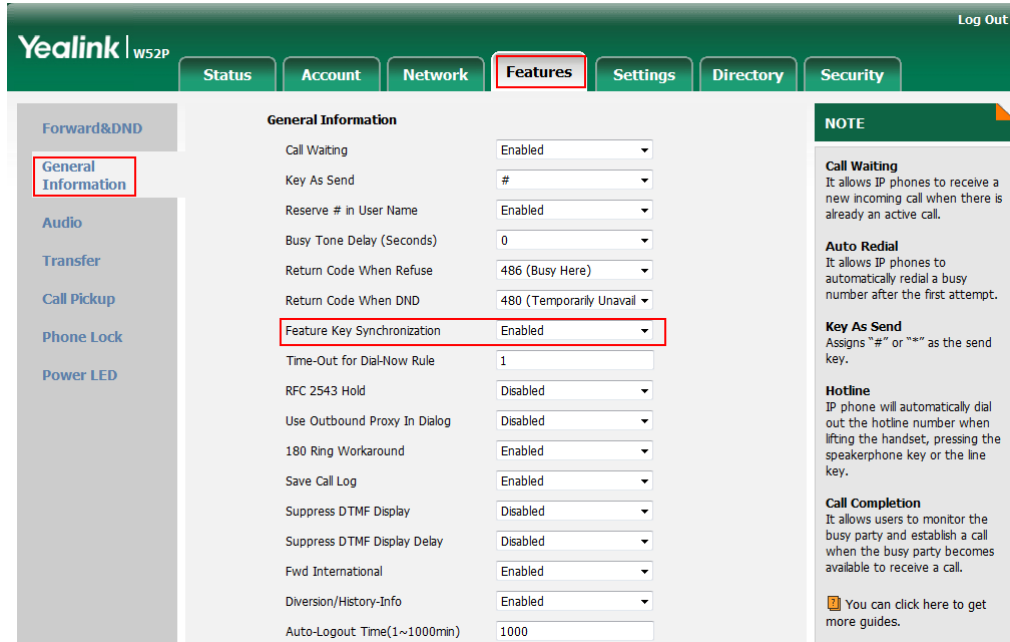


Figure 3 Feature Key Synchronization Configuration

4.4.4 Call Center Feature Configuration

Yealink W52P IP DECT PHONE does not support Call Center feature.

4.4.5 Call Recording Feature Configuration

Yealink W52P IP DECT PHONE does not support Call recording feature.

4.4.6 Security Classification Feature Configuration

Yealink W52P IP DECT PHONE does not support Security Classification feature.

4.4.7 Emergency Call Configuration

This section provides configuration instructions to configure the device to enable emergency call headers and ringback after hang up. Configure the emergency for phone as follows:

Step	Command	Purpose
Step 1	Configure the emergency number. Example: phone_setting.emergency.number = 311	Configure the emergency number.

Browse to the *Features* → *Phone Lock* page and set the Emergency number.

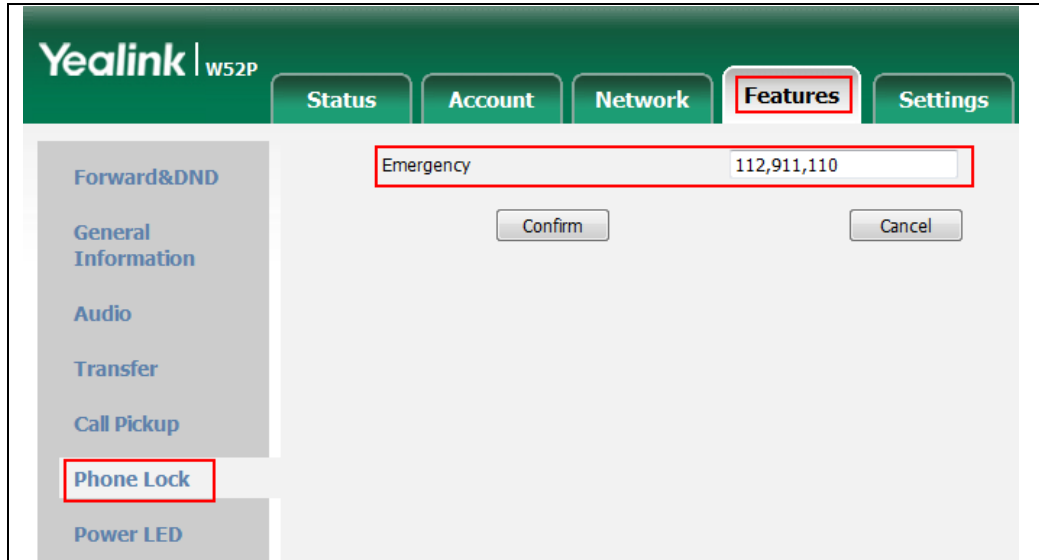


Figure 4 Emergency Configuration

4.4.8 Advice of Charge Configuration

Yealink W52P IP DECT PHONE does not support Advice of Charge feature.

4.5 Xtended Services Interface (Xsi) Feature Configuration

This section applies to SIP phones, soft clients, and other devices that provide a user interface.

This section provides configuration instructions for configuration of Xtended Services Interface features supported by the phone, including but not limited to, BroadWorks Directory and BroadWorks Call Logs.

For a phone to access Xsi features including services, directories, call logs etc. the SIP phone must first authenticate the user. At present, Yealink SIP phone support two methods for authenticating the user, BroadWorks User Login Credentials and SIP Authentication Credentials

BroadWorks User Login Credentials

- 1) Browse to the *Directory* → *Network Directory* → *XSI* settings.


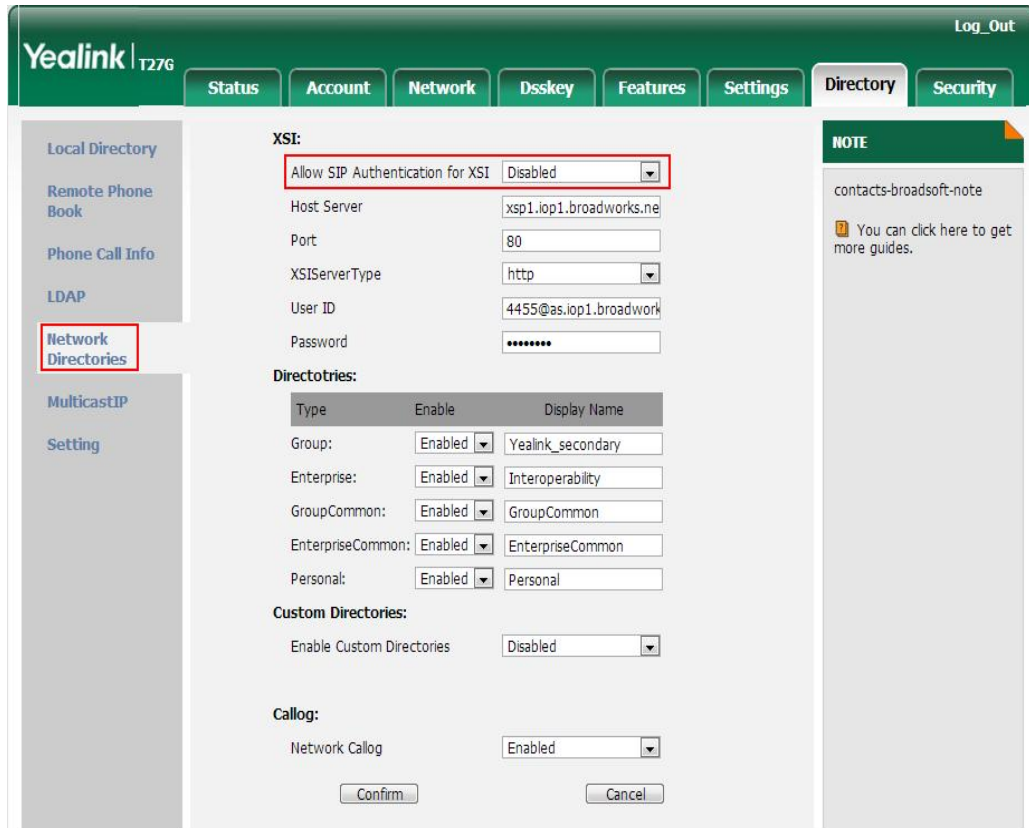


Figure 5 Xtended Services Interface Configuration

- 2) Type in the related parameters and then click **Confirm**.

SIP Authentication Credentials

- 3) Browse to the *Account* → *Register*, type in the correct account parameters, then click **Confirm** button.

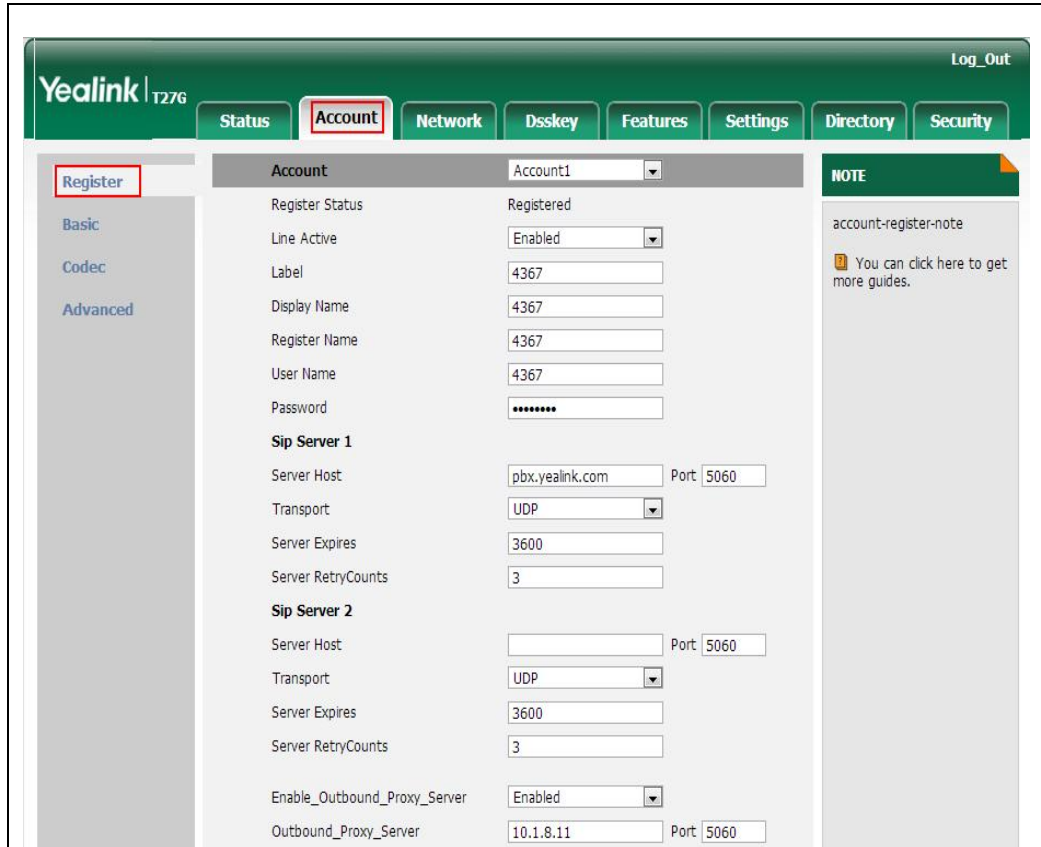

Yealink | T276 Log_Out

Account | Status | **Account** | Network | Dsskey | Features | Settings | Directory | Security

Register | Basic | Codec | Advanced

Account Account1

Register Status: Registered

Line Active: Enabled

Label: 4367

Display Name: 4367

Register Name: 4367

User Name: 4367

Password:

Sip Server 1

Server Host: pbx.yealink.com Port: 5060

Transport: UDP

Server Expires: 3600

Server RetryCounts: 3

Sip Server 2

Server Host: Port: 5060

Transport: UDP

Server Expires: 3600

Server RetryCounts: 3

Enable_Outbound_Proxy_Server: Enabled

Outbound_Proxy_Server: 10.1.8.11 Port: 5060

NOTE

account-register-note

You can click here to get more guides.

Figure 6 Xtended Services Platform Account Configuration

- 4) Browse to *Directory* → *Network Directories*, type in the correct parameters, then save the configuration.

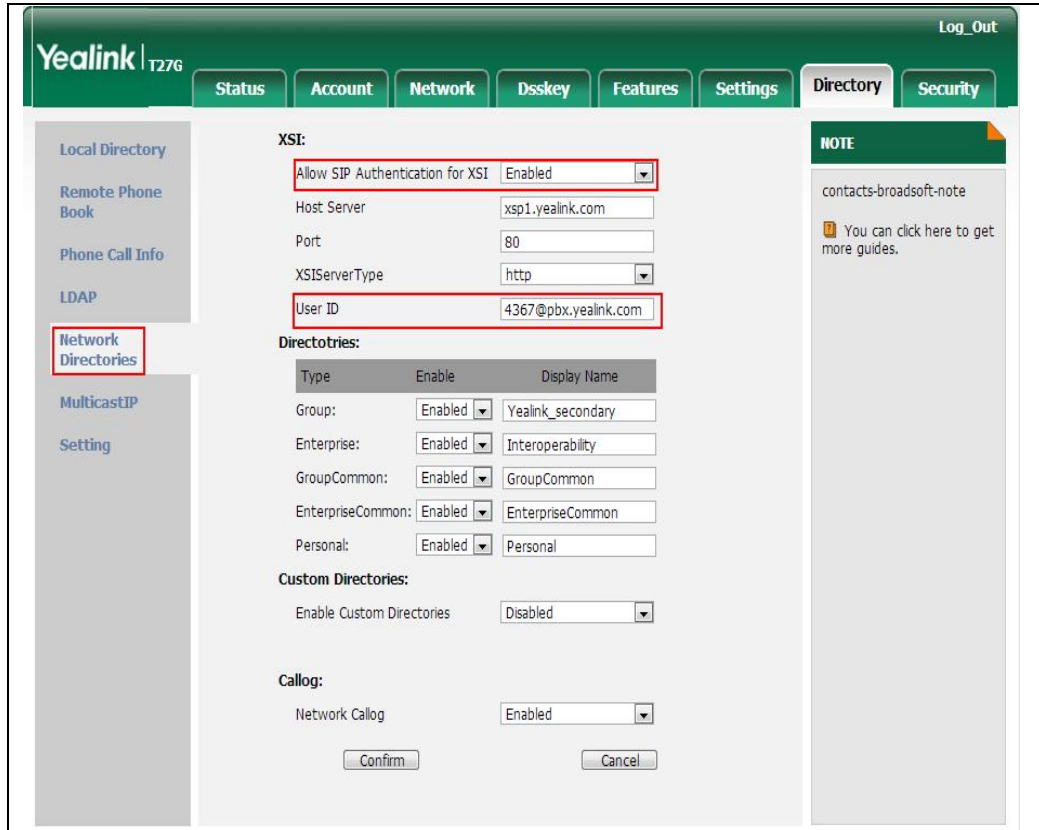


Figure 7 Xtended Services Platform Configuration

4.5.1 BroadWorks User Service Configuration

Integration with the BroadWorks Xtended Services Interface for User Service Configuration enables the phone to display and configure BroadWorks user services such as Remote Office, BroadWorks Anywhere, Call Forwarding, and Simultaneous Ring. To enable User Service Configuration, perform the following steps.

Step	Command	Purpose
Step 1	<code>sip.authentication_for_xsi =</code> Example: <code>sip.authentication_for_xsi = 1</code>	Enable the XSP authentication mode. 0= BroadWorks User Login credentials 1= SIP Authentication credentials
Step 2	<code>account.1.xsi.user=</code> <code>account.1.xsi.password =</code> Example: <code>account.1.xsi.user= 2405551111</code> <code>account.1.xsi.password = 123456</code>	Set the Xsi login user name and password for line 1.
Step 3	<code>account.1.xsi.host =</code> Example: <code>account.1.xsi.host =xsp1.iop1.broadworks.net</code>	Set the IP address or domain name of the Xsp server.

Step	Command	Purpose
Step 4	account.1.xsi.server_type = Example: xsi.server_type =http	Set the transport type for Xsi.
Step 5	account.1.xsi.port = Example: account.1.xsi.port =80	Set the transport port for Xsi.

4.5.2 BroadWorks Directory Configuration

Integration with the BroadWorks Xtended Services Interface for directories enables the phone to download personal, group, and enterprise directories from BroadWorks and makes them available to a user via the phone menus. To enable this feature, perform the following steps.

Step	Command	Purpose
Step 1	Enable the group directory to be displayed on the IP phone. Example: bw_phonebook.group_enable = 1	Enable the group directory to be displayed on the IP phone. 0 = Disabled 1 = Enable
Step 2	Configure the group directory name displayed on the IP phone. Example: bw_phonebook.group_displayname = Group	Configure Group as the group directory name displayed on the IP phone. The default value is Group.
Step 3	Configure the group common directory to be displayed on the IP phone. Example: bw_phonebook.group_common_enable = 1	Enable the group common directory to be displayed on the IP phone. 0 = Disabled 1 = Enable
Step 4	Configure the group common directory name displayed on the IP phone. Example: bw_phonebook.group_common_displayname = GroupCommon	Configure "GroupCommon" as the group common directory name displayed on the IP phone. The default value is "GroupCommon".
Step 5	Configure the enterprise directory to be displayed on the IP phone. Example: bw_phonebook.enterprise_enable = 1	Enable the enterprise directory to be displayed on the IP phone. <ul style="list-style-type: none"> ▪ 0 for Disabled ▪ 1 for Enabled
Step 6	Configure the enterprise directory name displayed on the IP phone. Example: bw_phonebook.enterprise_displayname = Enterprise	Configure Enterprise as the enterprise directory name displayed on the IP phone. The default value is Enterprise.
Step 7	Enable the enterprise common directory to be displayed on the IP phone. Example: bw_phonebook.enterprise_common_enable = 1	Enable the enterprise common directory to be displayed on the IP phone. <ul style="list-style-type: none"> ▪ 0 for Disabled ▪ 1 for Enabled

Step	Command	Purpose
Step 8	Configure the enterprise common directory name displayed on the IP phone. Example: bw_phonebook.enterprise_common_displayname = EnterpriseCommon	Configure "EnterpriseCommon" as the enterprise common directory name displayed on the IP phone. The default value is "EnterpriseCommon".
Step 9	Enable the personal directory to be displayed on the IP phone. Example: bw_phonebook.personal_enable = 1	Enable the personal directory to be displayed on the IP phone. <ul style="list-style-type: none"> ▪ 0 for Disabled ▪ 1 for Enabled
Step 10	Configure the personal directory name displayed on the IP phone. bw_phonebook.personal_displayname = Personal	Configure "Personal" as the personal directory name displayed on the IP phone. The default value is "Personal".
Step 11	Enable the custom directory feature. Example: bw_phonebook.custom = 1	Enable the custom directory feature. <ul style="list-style-type: none"> ▪ 0 for Disabled ▪ 1 for Enabled

4.5.3 BroadWorks Call Logs Configuration

Integration with the BroadWorks Xtended Services Interface for Call Logs enables the phone to get call log history (missed, placed, and received calls) from BroadWorks and make them available to a user via the phone menus. To enable this feature, perform the following step.

Step	Command	Purpose
Step 1	Enable the BroadSoft call log feature. Example: bw_phonebook.call_log_enable = 1	Enable BroadWorks call log feature. <ul style="list-style-type: none"> ▪ 0 for Disabled ▪ 1 for Enabled

Configure the phone as shown in the following figure.

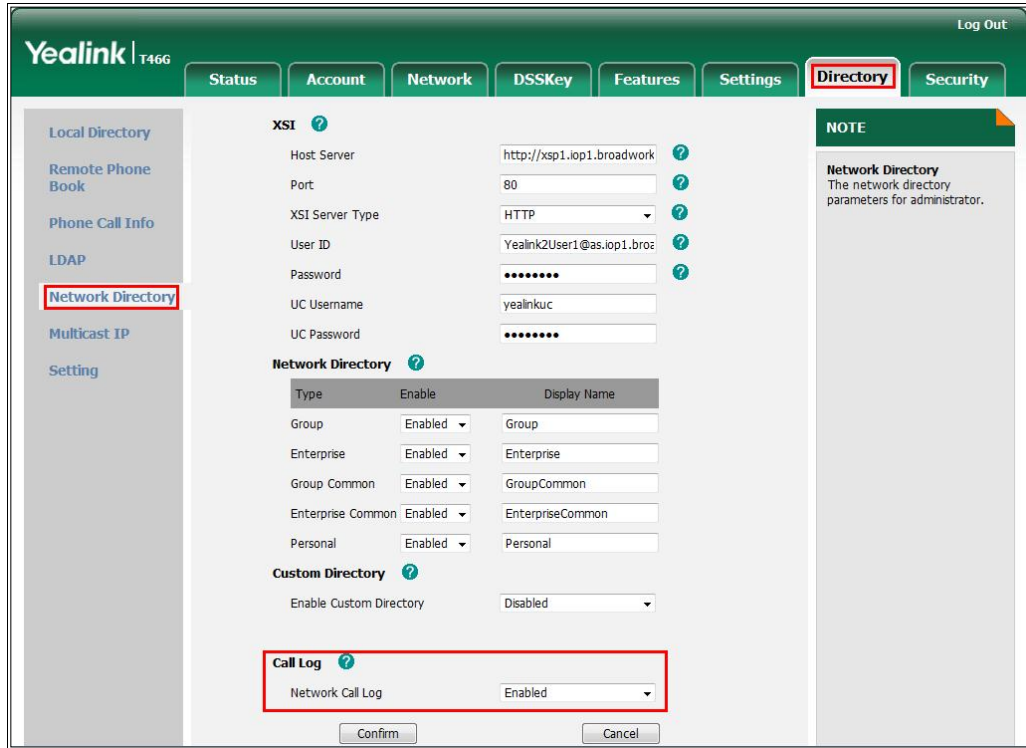


Figure 8 Call Logs Configuration

4.5.4 BroadWorks Call Park Configuration

Integration with the BroadWorks Xtended Services Interface for Call Park makes call park available to a user via the phone menus. To enable this feature, perform the following steps.

Step	Command	Purpose
Step 1	Enable call park feature for the line. Example: account.1.callpark_enable= 1	Enable call park feature. <ul style="list-style-type: none"> 0 for Disabled 1 for Enabled
Step 2	Enable the phone to display the Park soft key during a call. Example: features.call_park.enable = 1	The Park soft key appears on the LCD screen during a call. <ul style="list-style-type: none"> 0 for Disabled 1 for Enabled
Step 3	Enable the phone to display the GPark soft key during a call. Example: features.call_park.group_enable= 1	The GPark soft key appears on the LCD screen during a call. <ul style="list-style-type: none"> 0 for Disabled 1 for Enabled
Step 4	Enable the phone to play a warning tone when a call is parked against its line. Example: features.call_park.park_ring = 1	Enable the phone to play a warning tone when a call is parked against its line. <ul style="list-style-type: none"> 0 for Disabled 1 for Enabled

Step	Command	Purpose
Step 5	Enable the phone to display a parked indicator when a call is parked against its line. Example: features.call_park.park_visual_notify_enable = 1	Enable the phone to display a parked indicator when a call is parked against its line. <ul style="list-style-type: none"> ▪ 0 for Disabled ▪ 1 for Enabled

Configure the Call Park settings as shown in the following figure.

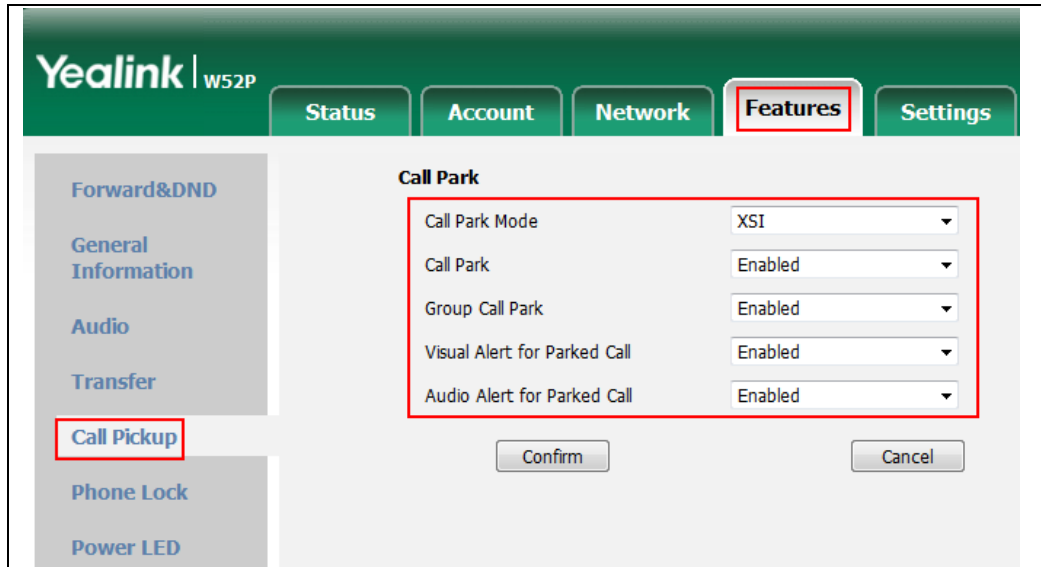


Figure 9 Call Park Configuration

4.6 Instant Message and Presence Configuration

Yealink W52P IP DECT PHONE does not support Instant Message and Presence.

4.7 Connected Line Presentation on UPDATE or Re-Invite

Set the phone's ability to refresh caller ID:

Step	Command	Purpose
Step 1	Enable refresh caller id feature. Example: account.1.refresh_remote_id.enable = 1	Enable refresh caller id feature. <ul style="list-style-type: none"> ▪ 0 for Disabled ▪ 1 for Enable

Log in to the device's web portal, and enter Account-advance-Caller ID Source. Select the configuration item PAI-FROM, or PAI-RPID-FROM.

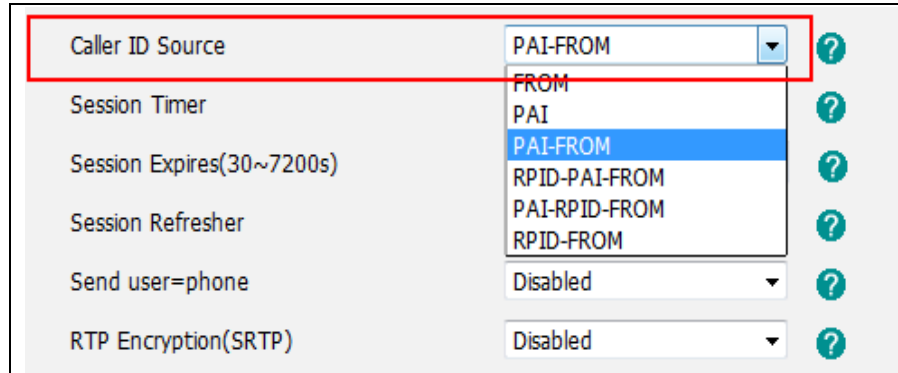


Figure 10 Connected Line Presentation on Update or Re-Invite

Or you can use the configuration parameter :account.x.cid_source=. The available values are:

- 0 – FROM
- 1 – PAI
- 2 – PAI-FROM
- 3 – PRID-PAI-FROM
- 4 – PAI-RPID-FROM
- 5 – RPID-FROM

You can select 1, 2, or 4 to make it work.

5 Device Management

The BroadWorks Device Management feature provides the capability to automate generation of device configuration files to support mass deployment of devices. This section identifies the device management capabilities supported by the Yealink W52P IP DECT PHONE and the configuration steps required. For Device Management configuration details not covered here, see the *BroadWorks Device Management Configuration Guide* [2] and the *BroadWorks CPE Kit Usage Guide* [8].

5.1 Device Management Capabilities Supported

The Yealink W52P IP DECT PHONE has completed Device Management interoperability testing with BroadWorks using the *BroadWorks Device Management Interoperability Test Plan* [7]. The results are summarized in the following table.

The BroadWorks test plan is composed of packages, each covering distinct interoperability areas. Each package is composed of one or more test items, which in turn, are composed of one or more test cases. The test plan exercises the Device Management interface between the device and BroadWorks with the intent to ensure interoperability.

The *Supported* column in the following table identifies the Yealink W52P IP DECT PHONE's support for each of the items covered in the test plan packages, with the following designations:

- Yes Test item is supported
- No Test item is not supported
- NA Test item is not applicable
- NT Test item was not tested

Caveats and clarifications are identified in the *Comments* column.

NOTE: *DUT* in the following table refers to the *Device Under Test*, which in this case is the Yealink W52P IP DECT PHONE.

BroadWorks Device Management Interoperability Test Plan Support Table			
Test Plan Package	Test Plan Package Items	Supported	Comments
HTTP File Download	HTTP Download Using Xtended Services Platform (Xsp) IP Address	Yes	
	HTTP Download Using Xtended Services Platform FQDN	Yes	
	HTTP Download Using Xtended Services Platform Cluster FQDN	Yes	
	HTTP Download With Double Slash	Yes	
HTTPS File Download	HTTPS Download Using Xtended Services Platform IP Address	Yes	
	HTTPS Download Using Xtended Services Platform FQDN	Yes	
	HTTPS Download Using Xtended Services Platform Cluster FQDN	Yes	

BroadWorks Device Management Interoperability Test Plan Support Table			
Test Plan Package	Test Plan Package Items	Supported	Comments
File Inspection	Inspect System Config File	Yes	
	Inspect Device-Specific Config File	Yes	
	Inspect Other Config Files	Yes	
	Inspect Static Files	Yes	
Device Inspection	Inspect SIP Settings	Yes	
	Inspect Line Settings	Yes	
	Inspect Service Settings	Yes	
	Inspect Time Zone Setting	Yes	
	Inspect Language Setting	No	
HTTP File Upload	HTTP Upload Using Xtended Services Platform IP Address	No	
	HTTP Upload Using Xtended Services Platform FQDN	No	
	HTTP Upload Using Xtended Services Platform Cluster FQDN	No	
Call Processing Sanity Tests	Register with Authentication	Yes	
	Call Origination	Yes	
	Call Termination	Yes	
	Remote Restart	Yes	
	Shared Line Origination	Yes	
	Shared Line Termination	Yes	
	Shared Line Status	Yes	
	Busy Lamp Field	No	
Flexible Seating	Association via Voice Portal	Yes	
	Association via Phone	No	
No Touch Provisioning	Using DHCP Options Field	No	
	BroadWorks Device Management Redirect	No	
	Vendor-Hosted Redirect Service	No	

5.2 Device Management Configuration

This section identifies the steps required to enable the Yealink W52P IP DECT PHONE for device management. For Device Management configuration details not covered here, see the *BroadWorks Device Management Configuration Guide* [2] and the *BroadWorks CPE Kit Usage Guide* [8].

5.2.1 Configure BroadWorks Tags

The template files in Device Management use tags to represent the data stored on BroadWorks. When a configuration changes for a user, Device Management parses the template files and replaces the Device Management tags with the associated data stored on BroadWorks. There are default tags defined in the Device Management software and there are custom tags that the service provider can create/define via the web portal for use by Device Management. There are two types of custom tags that can be defined: system-default tags are common to all phones on the system; device-type-specific tags are common to Yealink W52P only.

The Yealink W52P IP DECT PHONE makes use of dynamic tags, which may be configured by a BroadWorks administrator as either system default or device type-specific tags. This section identifies the required tags.

5.2.1.1 Create System Default Tags

Browse to *System* → *Resources* → *Device Management Tag Sets* and select the *System Default* tag set. Add the system default tags in the following table if they do not already exist.

Tag Name	Valid Settings	Description
%SNTP_SERVER_1%	IP address/FQDN	NTP server address.
%SNTP_SERVER_2%	IP address/FQDN	NTP server address alternate.
%DNS_SERVER_1%	IP address	DNS server address.
%DNS_SERVER_2%	IP address	DNS server address alternate.
%SBC_ADDRESS%	IP address/FQDN	SBC SIP address.
%SBC_PORT%	Port	SBC SIP port.
%USE_SBC_BOOLEAN%	0/1	Use SBC: 1=yes, 0=no.
%XSP_ADDRESS_XSI_ACTIONS%	IP address/FQDN	Xtended Services Platform server address.

Example System Default Tag settings

Tag Name	Valid Settings	Description
%COUNTRY%	United States, Australia, Austria, Brazil, Belgium, China, Czech, Denmark, Finland, France, Germany, Great Britain, Greece, Hungary, Lithuania, India, Italy, Japan, Mexico, New Zealand, Netherlands, Norway, Portugal, Spain, Switzerland, Sweden, Russia, Chile, Czech ETSI	Identifies the country for standard ringtones.
%FEATURE_BW_CALL_PARK%	0 1	Enable/Disable the call park feature for the phone. 0 = Disabled 1 = Enable
%TRANSPORT_TYPE%	0 1 2 3	Defines the SIP transport. 0 = UDP 1 = TCP 2 = TLS 3 = DNS NAPTR

Tag Name	Valid Settings	Description
%REJECT_ANONYMOUS_CALL_BINARY%	0 1	Enable/Disable the anonymous call rejection feature for each line. 0 = Disabled 1 = Enable
%CALL_WAITING_BINARY%	0 1	Enable/Disable the call waiting feature. 0 = Disabled 1 = Enable
%FEATURE_SYNC%	0 1	Enable/Disable the feature key synchronization for the phone. 0 = Disabled 1 = Enable
%LANGUAGEWEB%	English Turkish Portuguese Spanish Italian German French Polish Russian	Identifies language for web management.
%XSIPASSWORD-x%	String	Xsi login password for line x. *Leave the value as blank, this tag will be customized at each device profile level.
%TIMEZONENAME%	See Appendix B.	Defines the time zone name.
%W52_FIRMWARE%	25.<x.x.x>.rom Example:25.80.193.10.rom	Defines the firmware version for W52P.
%FEATURE_BW_DIR%	0 1	Enable/Disable the BroadSoft feature for the phone. 0 = Disabled 1 = Enable
%AUTO_ANSWER_BINARY%	0 1	Enable/Disable the auto answer feature for the phone. 0 = Disabled 1 = Enable

Device Management Tag Sets Modify

Display all the device management tags defined in the tag set. Tags can be added to the set or deleted from the set.

Tag Set: System Default

Delete	Tag Name ▲	Tag Value	Edit
<input type="checkbox"/>	%APPLICATION_DOMAIN%	as.iop1.broadworks.net	Edit
<input type="checkbox"/>	%DNS_SERVER_1%	199.19.193.13	Edit
<input type="checkbox"/>	%DNS_SERVER_2%	199.19.193.29	Edit
<input type="checkbox"/>	%DNS_SERVER%	199.19.193.12	Edit
<input type="checkbox"/>	%KWS300_XSP_PATH%	http://xsp.broadsoft.com/dms/kws300	Edit
<input type="checkbox"/>	%OUTBOUNDPROXYADDRESS%	199.19.193.9	Edit
<input type="checkbox"/>	%OUTBOUNDPROXYPORT%	5060	Edit
<input type="checkbox"/>	%OUTBOUNDPROXYTRANSPORT%	UDP	Edit
<input type="checkbox"/>	%SBC_ADDRESS%	sb1.iop2.broadworks.net	Edit
<input type="checkbox"/>	%SBC_PORT%	5060	Edit
<input type="checkbox"/>	%SIP_TRANSPORT%	0	Edit
<input type="checkbox"/>	%SNTP_SERVER_1%	time-a.nist.gov	Edit
<input type="checkbox"/>	%SNTP_SERVER_2%	time-b.nist.gov	Edit
<input type="checkbox"/>	%SNTP_SERVER%	time-b.nist.gov	Edit
<input type="checkbox"/>	%SNTP_SERVERIP%	192.5.41.41	Edit
<input type="checkbox"/>	%USE_SBC_BOOLEAN%	1	Edit
<input type="checkbox"/>	%XSP_ADDRESS_XSI_ACTIONS%	xsp1.iop1.broadworks.net	Edit
<input type="checkbox"/>	%XSP_ADDRESS%	xsp1.iop1.broadworks.net	Edit

[Page 1 of 1]

Figure 11 System Default Tag Settings

5.2.1.2 Create Device Type-specific Tags

Browse to *System* → *Resources* → *Device Management Tag Sets* and select *Add* to add a new tag set. Configure the tag set name using the device name appended by Tags: *Yealink W52P_Tags*. Add the device type specific tags in the following table to the device tag set. If the tag set already exists, ensure the tags are defined in the following table.

Example Device Type-specific Tag Settings

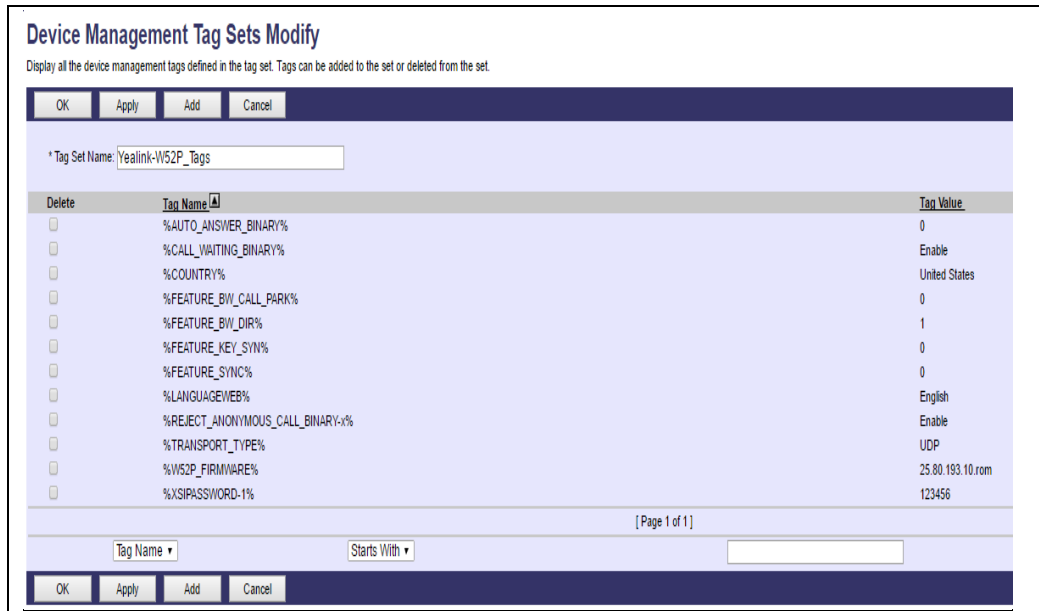


Figure 12 Device Type Specific Tag Settings

5.2.2 Configure BroadWorks Device Profile Type

The device profile type is a system-level structure that defines how the device interfaces with BroadWorks. It also identifies the default configuration files and other files, such as firmware, which are required for the device to operate correctly. The device profile type is created by the system administrator. Group administrators use the device profile type to create a device profile. The device profile is an instance of the device profile type that is associated with a physical device.

There are two BroadWorks device profile configuration methods described: import and manual. The import method takes a DTAF as input and builds the BroadWorks device profile type(s) automatically. The manual method takes the administrator through the steps to manually add and configure the device profile type(s).

The import method should be used if all of the following prerequisites are met:

- The BroadWorks Release is 17.0 or later.
- The device profile type(s) being imported do not already exist on the system. (If either a previous import or manual configuration was done, then the import fails.)
- There is a DTAF file available for import with a BroadWorks release level that is the same as or prior to the release to which it is being imported. If the DTAF file is at a release level later than the release being imported to, then the import can fail.

Otherwise, use the manual method.

For more detailed instructions, see the *BroadWorks CPE Kit Usage Guide* [8] and the *BroadWorks Device Management Configuration Guide* [2].

5.2.2.1 Configuration Method 1: Import


This section identifies the steps necessary to make use of the Device Management import feature to configure BroadWorks to add the Yealink W52P IP DECT PHONE as a Device Management-enabled device type. Also, see the *BroadWorks CPE Kit Usage Guide* [8].

Download the Yealink W52P CPE kit from BroadSoft Xchange at xchange.broadsoft.com. Extract the DTAF file(s) from the CPE kit. These are the import files. Repeat the following steps for each model you wish to import.

- 1) Log in to BroadWorks as an administrator.
- 2) Browse to *System* → *Resources* → *Identity/Device Profile Types* and then click **Import**.
- 3) Select *Browse* to find the extracted DTAF file for the model and then click **OK** to start the import.

After the import finishes, complete the following post-import configuration steps:

- 4) Browse to *System* → *Resources* → *Identity/Device Profile Types*.
- 5) Perform a search to find the imported Yealink device profile type, Yealink W52P.
- 6) Browse to the *Profile* page and change the Device Management Device Access FQDN to your Xtended Services Platform (Xsp) or Xtended Services Platform cluster address.

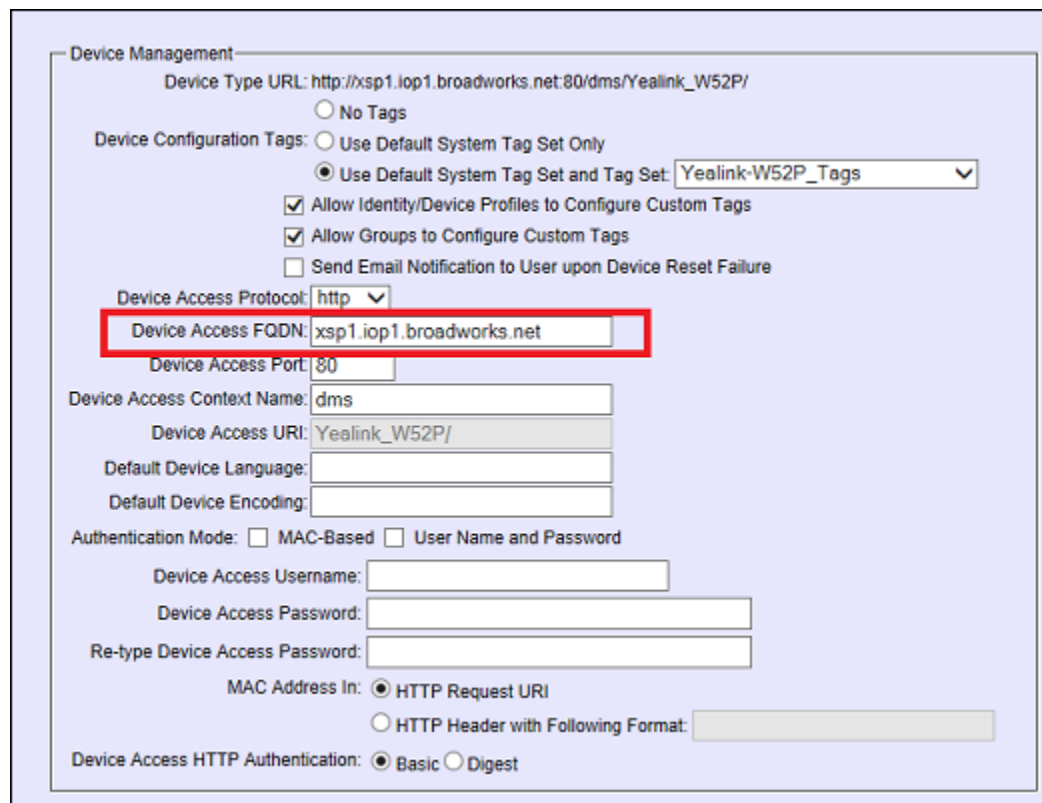

The screenshot shows the 'Device Management' configuration page for a Yealink W52P device. The 'Device Access FQDN' field is highlighted with a red box and contains the value 'xsp1.iop1.broadworks.net'. Other visible fields include 'Device Type URL', 'Device Configuration Tags', 'Device Access Protocol', 'Device Access Port', 'Device Access Context Name', 'Device Access URI', 'Default Device Language', 'Default Device Encoding', 'Authentication Mode', 'Device Access Username', 'Device Access Password', 'Re-type Device Access Password', 'MAC Address In', and 'Device Access HTTP Authentication'.

Figure 13 Device Access FQDN

- 7) Click the **Files and Authentication** link and then select the option to rebuild all the system files.

Firmware files must be obtained from Yealink. These files are not included in the import. Complete the steps in section [5.2.2.2.3 Static Files](#) to define the static firmware files and to upload the firmware.

NOTE: The non-firmware static files in section [5.2.2.2.3 Static Files](#) are included in the import.

- 8) After importing the DTAFs, restart the Application Server to load the *TimeZoneAlias* files.

5.2.2.2 Configuration Method 2: Manual

This section identifies the manual steps necessary to configure BroadWorks to add the Yealink W52P IP DECT PHONE as a Device Management-enabled device type. This method should not be used except in special cases as described in the opening to section [5.2.2 Configure BroadWorks Device Profile Type](#).

For more detailed instruction on manual configuration, see the *BroadWorks CPE Kit Usage Guide* [8] and the *BroadWorks Device Management Configuration Guide* [2].

The steps in this section can also be followed to update previously imported or configured device profile type(s) with new configuration files and firmware.

If there are DTAFs for more than one device model, these steps must be completed for each model.

5.2.2.2.1 Create or Modify Device Profile Type

This section identifies the BroadWorks device profile type settings relevant to Device Management for the Yealink W52P IP DECT PHONE.

Browse to *System* → *Resources* → *Identity/Device Profile Types* and perform a search to find the Yealink device profile type(s) created in section [3.1 BroadWorks Device Profile Type Configuration](#) or add the device profile type for each model using the settings from section [3.1 BroadWorks Device Profile Type Configuration](#) if they do not exist.

Configure the device profile type *Signaling Address Type*, *Standard* and *Advanced* options settings to match the settings in section [3.1 BroadWorks Device Profile Type Configuration](#).

Configure the device profile type *Device Management* options as shown in section [5.2.2.1 Configuration Method 1: Import](#).

The following subsections identify the required settings specific to Device Management.

5.2.2.2.2 Define Device Profile Type Files

This section describes the BroadWorks Device Management configuration necessary to identify the configuration files and other files that the Yealink W52P IP DECT PHONE downloads.

To define the files, configuration templates, firmware and other files the W52P IP DECT PHONE uses, they must be uploaded to BroadWorks. Download the Yealink W52P CPE kit from BroadSoft Xchange at xchange.broadsoft.com. Extract the configuration files from the *Configuration Files* folder of CPE kit. Obtain the firmware files directly from Yealink.

The following table identifies the Yealink configuration files distributed with the version 80 CPE kit.

File Name	CPE Kit Template File Name	File Type	Description
		System-level, Device-specific, Static, Time Zone Alias	
Examples:			
<i>BWMACADDRESS</i> <i>.cfg</i>	<i>%BWMACADDRESS%</i> <i>cfg</i>	Device-specific	This file contains device specific parameters that the phone needs to load.
<i>y00000000025.cfg</i>	<i>y00000000025.cfg</i>	System-level	This file contains system level parameters that the phone needs to load.
<i>contactData.xml</i>	<i>contactData1.xml</i>	Static	This file contains the contact information in XML format.
<i>blacklist.xml</i>	<i>blacklist.xml</i>	Static	This file contains the blacklist contact information in XML format.
<i>DialPlan.xml</i>	<i>DialPlan.xml</i>	Static	Specifies the dialing rules.
<i>AutoDST.xml</i>	<i>AutoDST.xml</i>	Static	Rules set of the beginning and end of Day Light Savings Time.
<i>TimeZoneAliasLabels_Yealink+<model>.properties</i>	<i>TimeZoneAliasLabels_Yealink-<model>.properties</i>	Time Zone Alias	The Time zone Alias file is a BroadWorks Device Management file used to map time zone identifiers between BroadWorks and Yealink phones. A Time zone Alias file is required for each model.
<i>WebItemsLevel.cfg</i>	<i>WebItemsLevel.cfg</i>	Static	This file defines the access level of configuration items in cfg format.
<i>super_search.xml</i>	<i>super_search.xml</i>	Static	This file configures the search source list in dialing.

The following table identifies other files that the Yealink W52P IP DECT PHONE downloads from the server or uploads to the server. These files are not provided in the CPE kit and must be obtained from Yealink.

File Name	File Type	Description
<i>x.x.x.x.rom</i>	Static	Device firmware file.

Browse to *System* → *Resources* → *Identity/Device Profile Types* → *Files and Authentication* to add the files as described in the following subsections.

5.2.2.2.2.1 System Files

This section identifies the system-level files used by Yealink and provides instructions for defining the files and uploading for Device Management.

W52P IP DECT PHONE model downloads a model-specific system file, named as follows:

- `y00000000025.cfg`

Add the `y00000000025.cfg` file to the device profile type with the settings shown in [Figure 14 y00000000025.cfg system File](#).

After creating the device profile type file, upload `y000000000xx.cfg` extracted from the CPE kit. Use the **Browse** button on the file definition screen. Be sure to click **Apply** after uploading the file

Example System File Settings

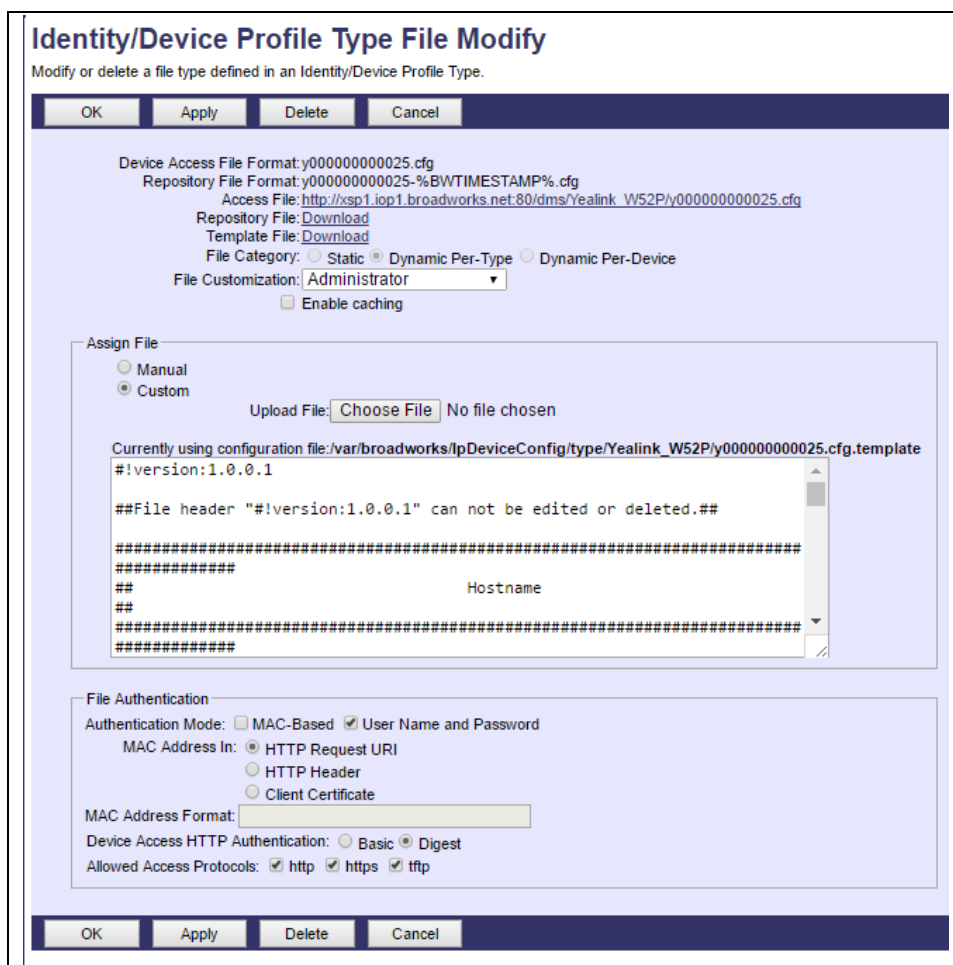


Figure 14 y00000000025.cfg system File

5.2.2.2.2.2 Device-specific Files

This section identifies the device-specific files used by Yealink and provides instructions for defining the files and uploading for Device Management.


W52P downloads a phone-specific file based on the phone's MAC address using the following file name format:

<mac-address>.cfg

Add a BroadWorks device profile type file to Yealink W52P device profile with the settings shown in [Figure 15 %BWMACADDRESS%.cfg File](#).

After creating the device profile type file, upload <mac-address>.cfg *extracted from the CPE kit*. Use the **Browse** button on the file definition screen. Be sure to click **Apply** after uploading the file.

Example Device-specific File Settings

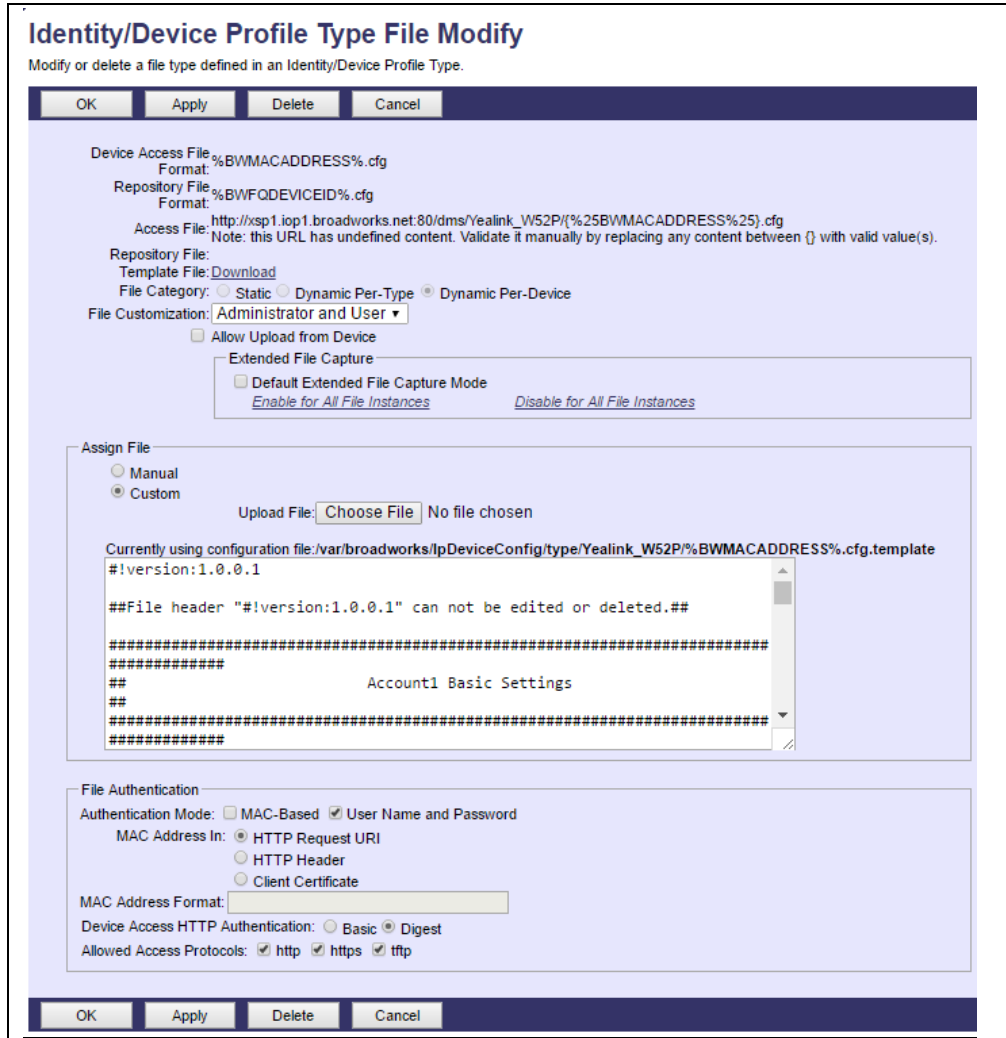

Identity/Device Profile Type File Modify
Modify or delete a file type defined in an Identity/Device Profile Type.

OK Apply Delete Cancel

Device Access File: %BWMACADDRESS%.cfg
Format: %BWMACADDRESS%.cfg

Repository File: %BWFQDEVICEID%.cfg
Format: %BWFQDEVICEID%.cfg

Access File: http://xsp1.iop1.broadworks.net:80/dms/Yealink_W52P/(%25BWMACADDRESS%25).cfg
Note: this URL has undefined content. Validate it manually by replacing any content between {} with valid value(s).

Repository File:
Template File: Download

File Category: Static Dynamic Per-Type Dynamic Per-Device

File Customization: Administrator and User ▾

Allow Upload from Device

Extended File Capture
 Default Extended File Capture Mode
Enable for All File Instances Disable for All File Instances

Assign File
 Manual
 Custom

Upload File: Choose File No file chosen

Currently using configuration file: /var/broadworks/lpDeviceConfig/type/Yealink_W52P/%BWMACADDRESS%.cfg.template

```
#!version:1.0.0.1

##File header "#!version:1.0.0.1" can not be edited or deleted.##

#####
#####
##
##
##
#####
```

File Authentication
Authentication Mode: MAC-Based User Name and Password
MAC Address In: HTTP Request URI
 HTTP Header
 Client Certificate

MAC Address Format:

Device Access HTTP Authentication: Basic Digest

Allowed Access Protocols: http https tftp

OK Apply Delete Cancel

Figure 15 %BWMACADDRESS%.cfg File

5.2.2.2.3 Static Files

Static files are files such as firmware and media files that are not configurable and/or do not make use of the dynamic BroadWorks Device Management tags. The Yealink W52P requires the following static files:

- <firmware-version>.rom
- *contactData.xml*
- *config.bin*

- *AutoDST.xml*
- *DialBlock.xml*
- *DialPlan.xml*
- *DialNow.xml*
- *super_search.xml*
- *favorite_setting.xml*
- *WebItemsLevel.cfg*

Add the static files to the device profile type with the settings shown in [Figure 16 Static File Settings](#).

After creating the device profile type file, upload static files (extracted from the CPE kit/obtained from Yealink). Use the **Browse** button on the file definition screen. Be sure to click **Apply** after uploading the file.

Example Static File settings



Identity/Device Profile Type File Modify
 Modify or delete a file type defined in an Identity/Device Profile Type.

OK Apply Delete Cancel

Device Access File Format: AutoDST.xml
 Repository File Format: AutoDST.xml
 Access File: <http://xsp1.iop1.broadworks.net:80/dms/Yealink-T27G/AutoDST.xml>
 Repository File: [Download](#)
 Template File: [Download](#)
 File Category: Static Dynamic Per-Type Dynamic Per-Device
 File Customization:
 Enable caching

Assign File
 Manual
 Custom
 Upload File: No file chosen

Currently using configuration file: `/var/broadworks/lpDeviceConfig/type/Yealink-T27G/AutoDST.xml.template`

```
<DST szTime="-9" szZone="United States-Alaska Time"
iType="1" szStart="3/2/7/2" szEnd="11/1/7/2"
szOffset="60"/>
<DST szTime="-8" szZone="Canada(Vancouver,Whitehorse)"
iType="1" szStart="3/2/7/2" szEnd="11/1/7/2"
szOffset="60"/>
<DST szTime="-8" szZone="Mexico(Tijuana,Mexicali)"
iType="1" szStart="4/1/7/0" szEnd="10/5/7/0"
szOffset="60"/>
<DST szTime="-8" szZone="United States-Pacific Time"
```

File Authentication
 Authentication Mode: MAC-Based User Name and Password
 MAC Address In: HTTP Request URI
 HTTP Header with Following Format:
 Device Access HTTP Authentication: Basic Digest
 Allowed Access Protocols: http https ttp

Figure 16 Static File Settings

5.2.2.2.4 Time Zone Alias File

The CPE kit contains a time zone properties file for each device model. This file maps the BroadWorks user's time zone settings to the device's time zone settings.

This time zone mapping file must be added to the `/usr/local/broadworks/bw_base/conf/dms` directory on the Application Server using the following file name format:

`TimeZoneAliasLabels_<Device_Type_Name>.properties`

For example, if the device type name is `Yealink_W52P`, the time zone mapping file name must be `TimeZoneAliasLabels_Yealink_W52P.properties`. A space in the device name must be converted to a "+" in the file name.

The file must contain the mapping of BroadWorks time zones values to Yealink time zone values. The following is an example of the file contents:

```
US_ALASKA=-9 cat
US_HAWAII=-10
CANADA_PACIFIC_TIME=-8
MEXICO_PACIFIC_TIME=-8
US_PACIFIC_TIME=-8
US_ARIZONA=-7
CANADA_MOUNTAIN_TIME=-7
MEXICO_MOUNTAIN_TIME=-7
US_MOUNTAIN_TIME=-7
CANADA_CENTRAL_TIME=-6
US_CENTRAL_TIME=-6
CANADA_EASTERN_TIME=-5
US_INDIANA=-5
US_EASTERN_TIME=-5
VENEZUELA_TIME=-4.5
CANADA_ALTANTIC_TIME=-4
CHILE_TIME=-4
CANADA_NEWFOUNDLAND=-3.5
ARGENTINA_TIME=-3
GREENWICH_MEAN_TIME=0
CENTRAL_EUROPEAN_TIME=+1
EASTERN_EUROPEAN_TIME=+2
EAST_AFRICAN_TIME=+3
IRAN_TIME=+3.5
AZERBAIJAN_TIME=+4
AFGHANISTAN_TIME=+4.5
PAKISTAN_TIME=+5
INDIA_TIME=+5.5
EASTERN_KAZAKHSTAN_TIME=+6
MYANMAR_TIME=+6.5
THAILAND_TIME=+7
CHINA_TIME=+8
JAPAN_TIME=+9
AUSTRALIAN_CENTRAL_STANDARD_TIME=+9.5
AUSTRALIAN_EASTERN_STANDARD_TIME=+10
NEWZEALAND_TIME=+12
```

This file should contain all the time zones supported by the Service Provider's BroadWorks system. The Application server must be restarted to load this file.

The BroadWorks Application Server must be restarted for the `TimeZoneAlias` files to be picked up by the system.

5.2.3 Create Device Profile Instance

The previous sections defined the device profile type such that the system is ready to mass deploy device profiles. A device profile is an instance of the device profile type and defines the BroadWorks interface to an individual Yealink phone deployed at a user's desk.

Browse to the BroadWorks <group> → *Resources* → *Identity/Device Profiles* and select *Add* to add a new Yealink W52P IP DECT PHONE device profile. Configure the device profile as shown in the figure 17.

Example Identity/Device Profile Settings

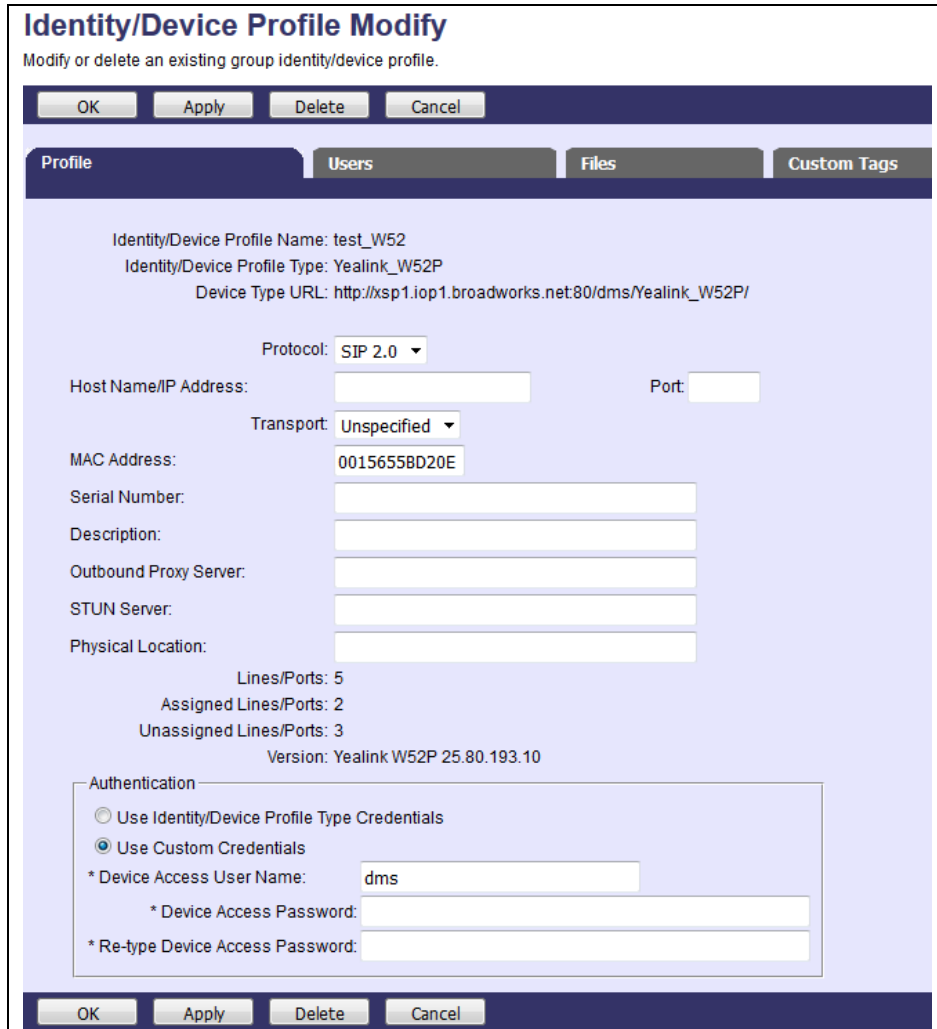


Figure 17 Device Profile Instance

For the Xtended Services Interface feature to be authenticated, it is necessary to override the Xtended Services Interface password for each of the lines at the device profile instance level. To override custom tags at the device profile instance level, click on the *Custom Tags* tab.

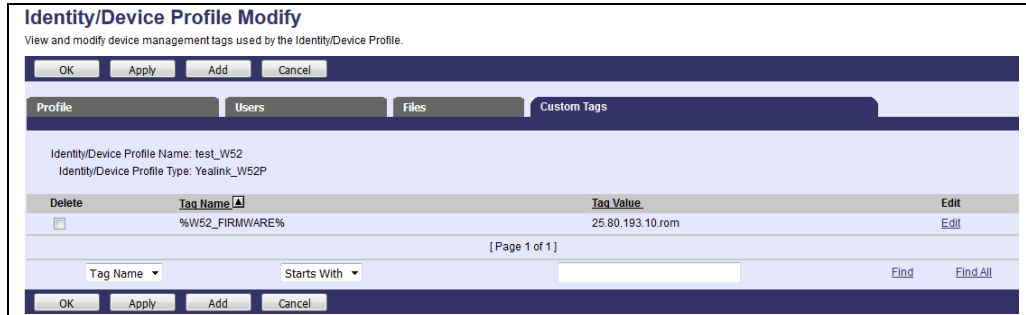


Figure 18 Device Profile Instance Custom Tags Override

Then click **Add** to add a custom tag with the following parameters:

Parameter	Value	Description/Notes
Tag Name	XSIPASSWORD-<line number> Example: XSIPASSWORD-1	This tag provides the Xsi password of the user for the line which is assigned to the phone. Line number is an integer corresponding to the phone line in assignment.
Tag Value	The user's Xsi password. Example: 123456	

Example device profile custom tag setting

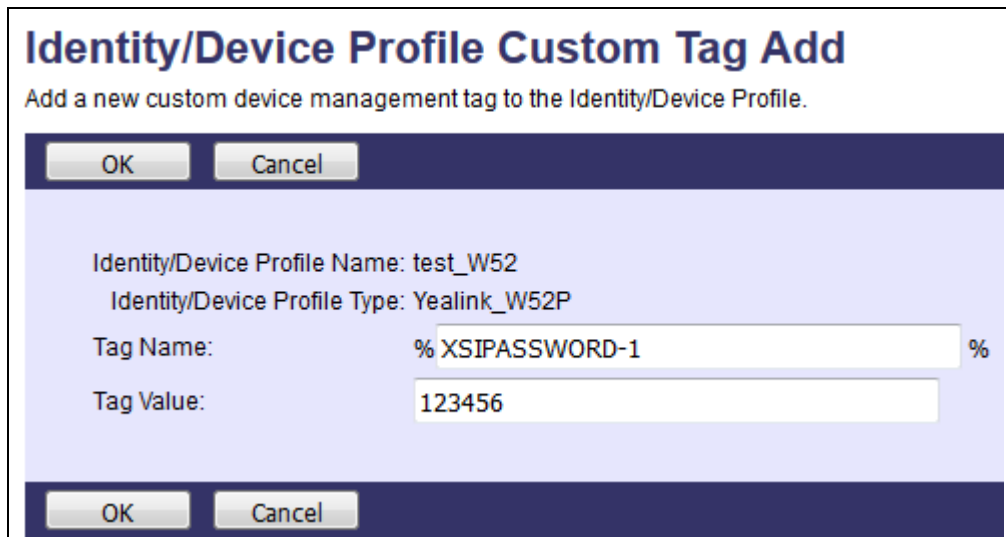


Figure 19 Device Profile Instance Custom Tags Add

Repeat the tag adding process for each of the lines provisioned on the device.

5.2.4 Configure BroadWorks User

Configure the user with the desired BroadWorks configuration and services. Any services that require a specific configuration on the device are managed via Device Management and are defined in the device configuration files, if the template files are created with the correct Device Management tags.

The device profile created in the previous section must be assigned to the BroadWorks user. Assigning the device profile to the user automatically causes the Device Management feature to generate the device configuration files for this user's device.

To assign the device profile to the user, browse to the *BroadWorks <user> → Addresses*.

5.2.5 Configure Edge Device

In many deployments, an edge device is deployed on the enterprise edge. Configure the edge device SIP server setting with the service provider's Session Border Controller IP address or FQDN. If there is no edge device and the phones communicate directly with the service provider's SBC, skip this section.

To integrate the edge device with Device Management, the SBC address tag (%SBC_ADDRESS%) defined in section [5.2.1.1 Create System Default Tags](#) must be overridden at the group level with the LAN address of the edge device. At the *Group → Utilities → Device Configuration* page, select the Yealink device profile (example: Yealink-W52P). Perform the following steps.

- 1) Click on the *Custom Tags* tab.
- 2) Click the **Add** button.
- 3) Add the *SBC* tag.
- 4) Enter "SBC_ADDRESS" as the tag.
- 5) Enter the IP address as the value (edge device LAN IP address).
- 6) Click **OK** to save the tag data.

This Tag/Value will be applied to all Yealink W52P phones in the group using the modified *Device Profile Type*.

5.2.6 Configure Yealink W52P IP DECT PHONE

This section describes the steps necessary to configure the Yealink W52P to integrate with BroadWorks Device Management.

The phone must be configured with the Device Management URL and authentication user name and password. This configuration can be accomplished as described in the sections:

- [5.2.6.1 Manual Provisioning](#)
- [5.2.6.2 No Touch Provisioning via BroadWorks Device Management](#)


5.2.6.1 Manual Provisioning

Log in to the web user interface for the W52P IP DECT PHONE (<https://<phone-ip-address>>). Go to the *Settings → Auto Provision* web page and set the following:

- Power On – On
- URL – Device Management server (Xtended Services Platform) device address URL
Example: [http\(s\)://xsp1.iop1.broadworks.net:80/dms/Yealink_W52P/](http(s)://xsp1.iop1.broadworks.net:80/dms/Yealink_W52P/)
- HTTP Authentication:
User Name – BroadWorks Device Access (Example: yealink)
Password – BroadWorks Device Access Password (Example: 123456)

Restart the phone to force the phone to download the Device Management configuration files and firmware.

Example Login (Default User Name/Password is admin/admin)

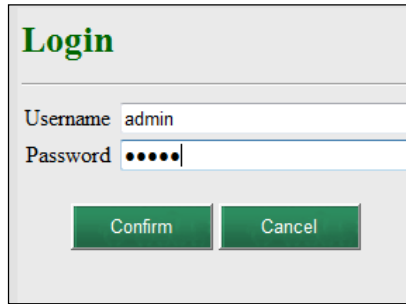

Login


Username: admin

Password: [masked]

Confirm Cancel

Figure 20 Login Screen

Example Auto Provision web page

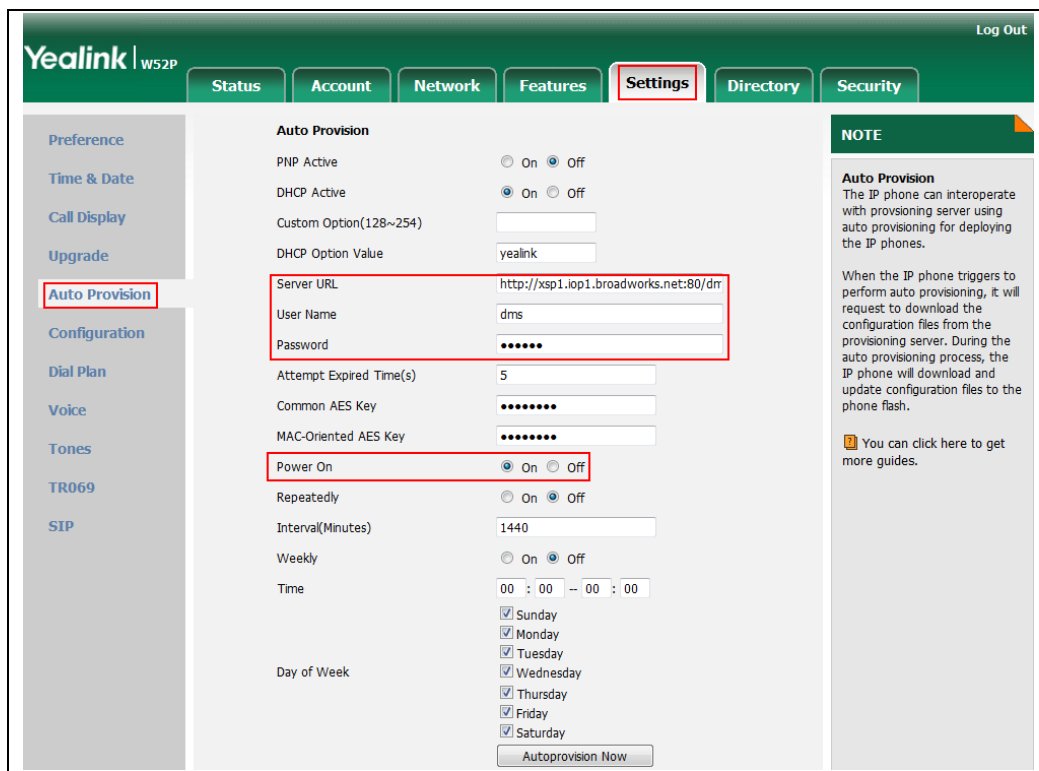

Yealink W52P Log Out

Status Account Network Features **Settings** Directory Security

Preference
Time & Date
Call Display
Upgrade
Auto Provision
Configuration
Dial Plan
Voice
Tones
TR069
SIP

Auto Provision

PNP Active On Off

DHCP Active On Off

Custom Option(128~254)

DHCP Option Value yealink

Server URL http://xsp1.iop1.broadworks.net:80/dm

User Name dms

Password [masked]

Attempt Expired Time(s) 5

Common AES Key [masked]

MAC-Oriented AES Key [masked]

Power On On Off

Repeatedly On Off

Interval(Minutes) 1440

Weekly On Off

Time 00 : 00 -- 00 : 00

Day of Week

Sunday
 Monday
 Tuesday
 Wednesday
 Thursday
 Friday
 Saturday

Autoprovision Now

NOTE

Auto Provision
The IP phone can interoperate with provisioning server using auto provisioning for deploying the IP phones.

When the IP phone triggers to perform auto provisioning, it will request to download the configuration files from the provisioning server. During the auto provisioning process, the IP phone will download and update configuration files to the phone flash.


 You can click here to get more guides.

Figure 21 Auto Provision Screen

The Yealink phone uses the file server parameters configured on the phone unless *Option 66* has been defined on the DHCP server. If the DHCP server returns data set for the *Option 66* parameter, then the Yealink phone uses the address defined in this field as the server address to retrieve its configuration data.

After all parameters are entered, click the **Save** button. Allow the phone to reboot and retrieve the new configuration parameters from Device Management.

5.2.6.2 No Touch Provisioning

Yealink W52P IP DECT PHONE does not support No Touch Provisioning.

5.3 Upgrade from Previous CPE Kits

The previous configuration sections are primarily structured around importing or manually configuring the Yealink W52P device profile types for the first time. Many of the steps are unnecessary when upgrading to a new firmware release or CPE kit version.

for general instructions on upgrading *BroadWorks CPE Kit Usage Guide* [\[8\]](#) for general instructions on upgrading.

Appendix A: Reference W52P Configuration Files

NOTE: The following samples are examples and should be used as a reference only. DO NOT CUT AND PASTE THESE EXAMPLES TO GENERATE YOUR CONFIGURATION FILES. Use the configuration files obtained from Yealink with the specific release to generate your configuration files.

System Default File: y00000000025.cfg

NOTE: This is an example file and it should be used for reference only.

```
#!/version:1.0.0.1

##File header "#!version:1.0.0.1" can not be edited or deleted.##

#####
#####
##
##                               Hostname
##
#####
#####
network.dhcp_host_name =

#####
#####
##
##                               PPPoE
##
#####
#####
network.pppoe.user =
network.pppoe.password =

#####
#####
##
##                               Network
##
#####
#####

#Enable or disable the VLAN of WAN port; 0-Disabled(default), 1-Enabled;
#Require reboot;
network.vlan.internet_port_enable =
network.vlan.internet_port_vid =
network.vlan.internet_port_priority =

#Enable or disable the DHCP to obtain the information of the VLAN; 0-
Disabled; 1-Enabled (default);
#Require reboot;
network.vlan.dhcp_enable =
network.vlan.dhcp_option =

#Configure the HTTP port (80 by default) and the HTTPS port (443 by
default) of the web server. Both range from 1 to 65535.
#Require reboot;
network.port.http =
network.port.https =
```

```
#Configure the maximum local RTP port. It ranges from 0 to 65535, the
default value is 12780.
#Require reboot;
network.port.max_rtpport =

#Configure the minimum local RTP port. It ranges from 0 to 65535, the
default value is 11780.
#Require reboot;
network.port.min_rtpport =

#Configure the voice QOS. It ranges from 0 to 63, the default value is 40.
#Require reboot;
network.qos.rtptos =

#Configure the SIP QOS. It ranges from 0 to 63, the default value is 26.
#Require reboot;
network.qos.signaltos =

#Configure the 802.1x mode; 0-Disabled (default), 1-Enabled (EAP-MD5);
#Require reboot;
network.802_1x.mode =

#Configure the username and password for 802.1x authentication.
#Require reboot;
network.802_1x.identity =
network.802_1x.md5_password =

network.802_1x.client_cert_url =

#Enable or disable the VPN feature; 0-Disabled (default), 1-Enabled;
#Require reboot;
network.vpn_enable =

#Enable or disable the LLDP feature; 0-Disabled, 1-Enabled (default);
#Require reboot;
network.lldp.enable =

#Configure the interval (in seconds) the phone broadcasts the LLDP
request. It ranges from 1 to 3600, the default value is 60.
#Require reboot;
network.lldp.packet_interval =

#####
#####
##                               Syslog Server
##
#####
#####
syslog.mode =

##It configures the IP address or domain name of the syslog server when
exporting log to the syslog server.
##It takes effect only if the parameter "syslog.mode" is configured as
Server.
##The default value is blank.It takes effect after a reboot.
syslog.server =

##It configures the detail level of syslog information to be exported.0
means nothing and 6 means all.
##The default value is 3.It takes effect after a reboot.Integer from 0 to
6
```

```
syslog.log_level =

syslog.bootlog_upload_wait_time =
syslog.ftp.append_limit_mode =
syslog.ftp.max_logfile =
syslog.ftp.post_mode =
syslog.log_upload_period =

#####
#####
##                               TR069
##
#####
#####
managementserver.enable =
managementserver.username =
managementserver.password =
managementserver.url =
managementserver.connection_request_username =
managementserver.connection_request_password =
managementserver.periodic_inform_enable =
managementserver.periodic_inform_interval =

#####
#####
##                               Autoprovision
##
#####
#####

#Enable or disable the Plug and Play feature; 0-Disabled, 1-
Enabled(default);
auto_provision.pnp_enable =

#Enable or disable the phone to check new configuration when powered on;
0-Disabled, 1-Enabled (default);
auto_provision.power_on =

#Enable or disable the phone to check the new configuration repeatedly; 0-
Disabled (default), 1-Enabled;
auto_provision.repeat.enable =

#Configure the interval (in minutes) the phone repeatedly checks the new
configuration. The default is 1440.
auto_provision.repeat.minutes =

#Enable or disable the phone to check the new configuration weekly; 0-
Disabled (default), 1-Enabled;
auto_provision.weekly.enable =

#Configure the week time the phone checks the new configuration.
Applicable when the auto provisioning mode is configured as weekly or
power on + weekly.
auto_provision.weekly.dayofweek =
auto_provision.weekly.begin_time =
auto_provision.weekly.end_time =

#Configure the URL of the auto provisioning server.
auto_provision.server.url =
http://%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEA
CCESSURI%
```

```
#Enable or disable the DHCP option mode; 0-Disabled, 1-Enabled (default);
auto_provision.dhcp_enable =

#Configure the value (manufacturer of the device) of DHCP option 60.
auto_provision.dhcp_option.option60_value =

#Configure the custom DHCP option number. It ranges from 128 to 254.
auto_provision.dhcp_option.list_user_options =

#Configure AES key (16 characters) for decrypting the common CFG file.
auto_provision.aes_key_16.com =

#Configure AES key (16 characters) for decrypting the MAC-Oriented CFG
file.
auto_provision.aes_key_16.mac =

auto_provision.custom.upload_method =
auto_provision.custom.protect =
auto_provision.custom.sync =

auto_provision.url_wildcard.pn =

auto_provision.reboot_force.enable =
auto_provision.attempt_expired_time =

#####
#####
##                               Watch Dog
##
#####
#####
watch_dog.enable =

#####
#####
##                               SIP Advanced
##
#####
#####
sip.use_23_as_pound =
sip.rfc2543_hold =
sip.use_out_bound_in_dialog =
sip.reg_surge_prevention =
sip.send_response_by_request =
sip.notify_reboot_enable =
sip.disp_incall_to_info =
sip.limit_server_name =
sip.limit_server_reason =
sip.listen_port =
sip.tls_listen_port =
sip.trust_ctrl =
sip.nat_stun.enable =
sip.nat_stun.server =
sip.nat_stun.port =
sip.timer_t1 =
sip.timer_t2 =
sip.timer_t4 =
custom.features.redial_via_local_sip_server.enable =
```

```
##It is XSI authentication mode.0-Disable 1-Enable (Except T19P/T21P
Models)
sip.authentication_for_xsi =

##It is ASCII conversion into corresponding symbols.
##The default value is blank. 0-Disable 1-Enable
sip.escape_characters.enable =
##The default value is 0 ( said according to the transmission mode
configured to listen on port),1-
##1-said at the same time to monitor TCP and UDP
##2-said to monitor TCP and UDP at the same time, and from the BLF - the
LIST to subscribe to the contact with a transport = TCP parameters
sip.listen_mode =
##The default value is 0-Disable, 1-Enable.It takes effect after a reboot.
##0-registered according to the uri of the tectonic refer - by domain
##1-according to refer the from header fields to construct refer - by
domain

sip.refer_by_header_auto_build =
##The default is blank.The Valid characters are digits - _.! ~ * # '() &
Q462 = + R452 $,;?/ \ 0
##It is username needs to be preserved in a special notation.
sip.reserve_characters =
##The default value is 0.(contracting out the random contact, via port to
carry fixed port).It takes effect after a reboot.
##1-the out-contracting port random contact, via port to carry
##2-the out-contracting ports fixed contact, via carry fix
sip.tcp_port_random_mode =
sip.terminate_notify_sub_delay_time =
sip.bind_local_addr_enable =

#####
#####
##                               Phone Features
##
#####
#####

#Enable or disable the transferee to display the missed call prompt when
receiving a semi_attended transfer call;
#0-Disabled, 1-Enabled (default);
transfer.semi_attend_tran_enable =

#Enable or disable the phone to complete the blind or attended transfer
through on-hook;
#0-Disabled (default), 1-Enabled;
transfer.blind_tran_on_hook_enable =
transfer.on_hook_trans_enable =

#Enable or disable to access the web user interface of phone using the
http/https protocol;
#0-Disabled,1-Enabled (default);
#Require Reboot;
wui.https_enable =
wui.http_enable =
```



```
phone_setting.emergency.number =
features.voice_mail_tone_enable =
features.busy_tone_delay =
features.direct_ip_call_enable =
features.intercom.headset_prior.enable =
features.cumulative_display_call_log.enable =
features.caller_name_type_on_dialing =
directory.search_default_input_method=
directory.edit_default_input_method =
phone_setting.called_party_info_display.enable=
phone_setting.call_info_display_method=

#####
#####
##
##                               Echo Cancellation
##
#####
#####
voice.vad =
voice.cng =
voice.echo_cancellation =

#####
#####
##
##                               Jitter Buffer
##
#####
#####
voice.jib.adaptive =
voice.jib.min =
voice.jib.max =
voice.jib.normal =

#####
#####
##
##                               Super Search
##
#####
#####
super_search.recent_call =
super_search.url =
http://%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEA
CCESSURI%super_search.xml

#####
#####
##
##                               Security Settings
##
#####
#####
#Enable or disable the phone to only accept the certificates in the
Trusted Certificates list;
#0-Disabled, 1-Enabled (default);
security.trust_certificates =

#Set the password of the user or the administrator, the value format is:
user:password or admin:password;
#security.user_password = admin:admin
security.user_password =
```

```
security.user_name.user =
security.user_name.admin =
security.user_name.var =

base.pin_code =

#0-Default Cert, 1-Custom Cert, 2-All Cert(default);
security.ca_cert =

#0-Disabled (default), 1-Enabled;
security.dev_cert =

#0-Disabled (default), 1-Enabled;
security.cn_validation =

#####
#####
##                               Dial Plan
##
#####
#####
dialplan.area_code.code =
dialplan.area_code.min_len =
dialplan.area_code.max_len =
dialplan.area_code.line_id =

### X ranges from 1 to 10
###dialplan.block_out.number.x =
###dialplan.block_out.line_id.x =

dialplan.block_out.number.1 =
dialplan.block_out.line_id.1 =

###X ranges from 1 to 100
###dialplan.dialnow.rule.X =
###dialplan.dialnow.line_id.X =

dialplan.dialnow.rule.1 =
dialplan.dialnow.line_id.1 =

###X ranges from 1 to 100
###dialplan.replace.prefix.X =
###dialplan.replace.replace.X =
###dialplan.replace.line_id.X =

dialplan.replace.prefix.1 =
dialplan.replace.replace.1 =
dialplan.replace.line_id.1 =

dialplan_dialnow.url =
http://%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEA
CCESSURI%dialnow.xml
phone_setting.dialnow_delay =
dialplan_replace_rule.url =
http://%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEA
CCESSURI%dialplan.xml

#####
#####
##                               Remote Phonebook
##
```

```
#####  
#####  
###X ranges from 1 to 5  
###remote_phonebook.data.X.url =  
###remote_phonebook.data.X.name =  
  
remote_phonebook.data.1.url =  
http://%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEEA  
CCESSURI%  
remote_phonebook.data.1.name =  
  
remote_phonebook.display_name =  
  
###It enables or disables the phone to update the data of the remote phone  
book at a time when accessing the remote phone book.  
###0-Disabled, 1-Enabled. The default value is 0.(Except T19P/T21P Models)  
features.remote_phonebook.enter_update_enable =  
  
##It enables or disables the phone to perform a remote phone book search  
when receiving an incoming call.  
##0-Disabled,1-Enabled.  
##The default value is 0.  
features.remote_phonebook.enable =  
  
##It configures the interval (in seconds) for the phone to update the data  
of the remote phone book from the remote phone book server.  
##The value 0 means the phone will not regularly update the data of the  
remote phone book from the remote phone book server.  
##The default value is 21600.Integer from 3600 to 2592000,and 0.  
features.remote_phonebook.flash_time =  
  
#####  
#####  
##  
##  
##  
#####  
#####  
##It enables or disables LDAP feature.0-Disabled,1-Enabled.  
##The default value is 0.  
ldap.enable =  
  
##It configures the criteria for searching the contact name attributes.  
##The default value is blank.  
ldap.name_filter =  
  
##It configures the criteria for searching the contact number attributes.  
##The default value is blank.  
ldap.number_filter =  
  
##It configures the IP address or domain name of the LDAP server.  
##The default value is blank.  
ldap.host =  
  
##It configures the port of the LDAP server.  
##The default value is 389.Integer from 1 to 65535.  
ldap.port =  
  
##It configures the LDAP search base which corresponds to the location of  
the LDAP phonebook.  
##Example:ldap.base = dc=yealink,dc=cn.  
##The default value is blank.  
ldap.base =
```

```
##It configures the user name for accessing the LDAP server.
##The default value is blank.
ldap.user =

##It configures the password for accessing the LDAP server.
##The default value is blank.
ldap.password =

##It configures the maximum of the search results returned by the LDAP
server to be displayed.
##The default value is 50.Integer from 1 to 32000.
ldap.max_hits =

##It configures the name attributes of each record to be returned by the
LDAP server.
##Multiple attributes are separated by spaces.Example:ldap.name_attr =sn
cn.
##The default value is blank.
ldap.name_attr =

##It configures the number attributes of each record to be returned by the
LDAP server.
##Multiple attributes are separated by spaces.Example:ldap.numb_attr =
Mobile ipPhone.
##The default value is blank.
ldap.numb_attr =

##The default value is blank.
ldap.display_name =

##It configures the LDAP version.
##The default value is 3.
ldap.version =

##It enables or disables the phone to perform an LDAP search when
receiving an incoming call.
##0-Disabled,1-Enabled.
##The default value is 0.
ldap.call_in_lookup =

##It enables or disables the phone to sort the search results in
alphabetical order or numerical order.
##0-Disabled,1-Enabled.
##The default value is 0.
ldap.ldap_sort =
##It is the electricity + start, automatic search + 00 the beginning and
the beginning of the numbe
##The default value is 0.(0-Disable,1-Enable )
ldap.incoming_call_special_search.enable =
##The default value is 0,value of 0 to 2, respectively the ldap, ldap +
StarTLS and ldaps
ldap.tls_mode =
ldap.call_out_lookup =

#####
#####
##
##
#####
#####
```

```
#Configure the return code when activating DND; 404-No Found, 480-
Temporarily not available (default), 486-Busy here;
features.dnd_refuse_code =

#Configure the return code when refusing a call. The valid values are 404,
480, 486 (default).
features.normal_refuse_code =

#Enable or disable the call waiting feature; 0-Disabled, 1-Enabled
(default);
call_waiting.enable = %CALL_WAITING_BINARY%

#Enable or disable the playing of call waiting tone; 0-Disabled, 1-Enabled
(default);
call_waiting.tone =

#Enable or disable the phone to save the call history; 0-Disabled, 1-
Enabled (default);
features.save_call_history =

#Configure the overtime (in minutes) of logging web user interface. It
ranges from 1 to 1000, the default value is 5.
features.relog_offtime =

#Enable or disable the phone to deal the 180 SIP message after the 183 SIP
message; 0-Disabled, 1-Enabled (default);
phone_setting.is_deal180 =

#####
#####
##
##                               Power Led Settings
##
#####
#####
phone_setting.missed_call_power_led_flash.enable =
phone_setting.common_power_led_enable =
phone_setting.ring_power_led_flash_enable =
phone_setting.mail_power_led_flash_enable =

#####
#####
##
##                               Base_Upgrade
##
#####
#####
firmware.url =
http://%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEA
CCESSURI%%W52_FIRMWARE%

#####
#####
##
##                               Handset_upgrade
##
#####
#####
over_the_air.url =
over_the_air.base_trigger =
over_the_air.handset_tip =
```

```

#####
#####
##                               Certificates
##
#####
trusted_certificates.url =
http://%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEA
CCESURI%ca.crt

#trusted_certificates.delete = http://localhost/all,delete all the trusted
certificates;
trusted_certificates.delete =

server_certificates.url =
http://%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEA
CCESURI%server.pem

#server_certificates.delete = http://localhost/all, delete the server
certificate;
server_certificates.delete =

#####
#####
##                               User Mode
##
#####
security.var_enable =
web_item_level.url =
http://%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEA
CCESURI%WebItemsLevel.cfg

#####
#####
##                               Local Contact/DST Time/Replace Rule
##
#####

dialplan_replace_rule.url =
http://%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEA
CCESURI%DialPlan.xml
blacklist.url =
http://%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEA
CCESURI%blacklist.xml
handset.X.contact_list.url =
http://%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEA
CCESURI%contactData1.xml

#####
#####
##                               Customized Factory Configurations
##
#####
#Configure the access URL for downloading the customized factory
configurations;
custom_factory_configuration.url =
http://%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEA
CCESURI%factory.cfg

```

```
#####
#####
##                               Custom Configuration
##
#####
#####
#Configure the access URL for downloading the configurations.
#Before using this parameter, you should store the desired configuration
file to the provisioning server.
configuration.url =
http://%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEA
CCESSURI%config.bin

custom_mac_cfg.url =

#####
#####
##                               OpenVPN
##
#####
#####
#Configure the access URL for downloading the open VPN tar;
openvpn.url =

#####
#####
##                               Number Assignment
##
#####
#####
#The line accept to incoming(1,2,3,4,5);X ranges from 1 to 5
#handset.X.incoming_lines = 1,2,3,4

handset.1.incoming_lines =

#The line accept to call out(1,2,3,4,5)
#handset.X.dial_out_lines = 1,2,5
#handset.X.dial_out_default_line = 1

handset.1.dial_out_lines =
handset.1.dial_out_default_line =

handset.1.name =

#####
#####
##                               Auto Provisioning Code
##
#####
#####
#This feature allows user to trigger the auto provisioning by pressing a
predefined string on the phone.
#Require reboot;
#"X" ranges from 1 to 50

#Configure the auto provisioning name.
#The valid value is a string, the maximum length is 100.
#autoprovision.X.name =

#Configure the auto provisioning code;
#The valid value is a string, the maximum length is 100.
```

```
#autoprovision.X.code =

#Configure the URL of the auto provisioning server.
#The valid value is a string, the maximum length is 256.
#autoprovision.X.url =

#Configure the username and password for downloading.
#The valid value is a string, the maximum length is 100.
#autoprovision.X.user =
#autoprovision.X.password =

#Configure AES key (16 characters) for decrypting the common CFG file and
MAC-Oriented CFG file.
#autoprovision.X.com_aes =
#autoprovision.X.mac_aes =

autoprovision.1.name =
autoprovision.1.code =
autoprovision.1.url =
autoprovision.1.user =
autoprovision.1.password =
autoprovision.1.com_aes =
autoprovision.1.mac_aes =

#####
#####
##                               Handset
##
#####
#####

auto_provision.handset_configured.enable =
custom.handset.language=
custom.handset.time_format =
custom.handset.date_format =
custom.handset.color_scheme =
custom.handset.auto_intercom =
custom.handset.screen_saver.enable =
custom.handset.backlight_in_charger.enable =
custom.handset.backlight_out_of_charger.enable =
custom.handset.keypad_light.enable =
custom.handset.keypad_tone.enable =
custom.handset.confirmation_tone.enable =
custom.handset.low_battery_tone.enable =
custom.handset.voice_mail_notify_light.enable =
custom.handset.missed_call_notify_light.enable =
custom.handset.auto_answer.enable =
custom.handset.eco_mode.enable =
custom.handset.hang_up_call_on_hook.mode =

#####
#####
##                               ECO
##
#####
#####
base.eco_mode.enable=
```



```
#####
#####
##                               Repeater
##
#####
#####
base.repeater_mode.enable=

#####
#####
##                               Features DTMF
##
#####
#####
features.dtmf.hide =
features.dtmf.hide_delay =

#####
#####
##                               DNS
##
#####
#####
dns_cache_a.1.name =
dns_cache_a.1.ip =
dns_cache_a.1.ttl =
dns_cache_srv.1.name =
dns_cache_srv.1.port =
dns_cache_srv.1.priority =
dns_cache_srv.1.target =
dns_cache_srv.1.weight =
dns_cache_srv.1.ttl =
dns_cache_naptr.1.name =
dns_cache_naptr.1.flags =
dns_cache_naptr.1.order =
dns_cache_naptr.1.preference =
dns_cache_naptr.1.replace =
dns_cache_naptr.1.service =
dns_cache_naptr.1.ttl =
```

Device-specific File: %BWMACADDRESS%.cfg

NOTE: This is an example file and it should be used for reference only.

```
#!version:1.0.0.1

##File header "#!version:1.0.0.1" can not be edited or deleted.##

#####
#####
##                               Account1 Basic Settings
##
#####
#####
account.1.enable = %BWLIN-BINARY-1%
account.1.label = %BWEXTENSION-1%
account.1.display_name = %BWCLID-1%
account.1.auth_name = %BWAUTHUSER-1%
```

```
account.1.user_name = %BWLINPORT-1%
account.1.password = %BWAUTHPASSWORD-1%
account.1.outbound_proxy_enable = %USE_SBC_BOOLEAN%
account.1.outbound_host = %SBC_ADDRESS%
account.1.outbound_port = %SBC_PORT%
account.1.backup_outbound_host =
account.1.backup_outbound_port =
account.1.outbound_proxy_fallback_interval =

##It configures the transport type for account 1. 0-UDP,1-TCP,2-TLS,3-DNS-
NAPTR
##The default value is 0.
account.1.sip_server.1.transport_type =
##It configures the backup server transport type for account 1. 0-UDP,1-
TCP,2-TLS,3-DNS-NAPTR
##The default value is 0.
account.1.sip_server.2.transport_type =

#####
#####
##                               Failback
##
#####
#####
account.1.naptr_build =
account.1.fallback.redundancy_type =
account.1.fallback.timeout =
account.1.sip_server.1.address = %BWHOST-1%
account.1.sip_server.1.port =
account.1.sip_server.1.expires =
account.1.sip_server.1.retry_counts =
account.1.sip_server.1.fallback_mode =
account.1.sip_server.1.fallback_timeout =
account.1.sip_server.1.register_on_enable =

account.1.sip_server.2.address =
account.1.sip_server.2.port =
account.1.sip_server.2.expires =
account.1.sip_server.2.retry_counts =
account.1.sip_server.2.fallback_mode =
account.1.sip_server.2.fallback_timeout =
account.1.sip_server.2.register_on_enable =

account.1.dns_cache_type =
account.1.static_cache_pri =
account.1.register_expires_overlap =
account.1.subscribe_expires_overlap =

#####
#####
##                               Register Advanced
##
#####
#####
##It configures the SIP server type for account X.0-Default,2-BroadSoft,4-
Cosmocom,6-UCAP
##The default value is 0.

account.1.sip_server_type = 2

account.1.unregister_on_reboot =
account.1.proxy_require =
account.1.srv_ttl_timer_enable =
```

```
account.1.register_mac =
account.1.register_line =
account.1.reg_fail_retry_interval =

#####
#####
##                               NAT Settings
##
#####
#####

#Enable or disable the NAT traversal; 0-Disabled (default), 1-STUN;
account.1.nat.nat_traversal =

##It configures the IP address or domain name of the STUN server for
account X.
##The default value is blank.
##V80 do not support
account.1.nat.stun_server =

##It configures the port of the STUN server for account X.
##The default value is 3478.
##V80 do not support
account.1.nat.stun_port =

#Enable or disable the NAT keep-alive; 0-Disabled, 1-Enabled (default);
account.1.nat.udp_update_enable =

#Specify the keep-alive interval (in seconds), the default value is 30.
account.1.nat.udp_update_time =

#Enable or disable the NAT Rport; 0-Disabled (default), 1-Enabled;
account.1.nat.rport =

#####
#####
##                               Account1 Advance Settings
##
##
#####
#####

##It configures the voice mail number for account X.
##The default value is blank.
voice_mail.number.1 = %BWVOICE-PORTAL-NUMBER-1%

account.1.auto_dial_enable =
account.1.auto_dial_num =

account.1.call_id_mode =
account.1.call_info =

#####
#####
##                               Subscribe
##
#####
#####

##It enables or disables the phone to subscribe the message waiting
indicator for account X.0-Disabled,1-Enabled.
##The default value is 0.
account.1.subscribe_mwi =
```

```
##It is configuration MWI is NOTIFY messages, whether in Terminated status
attributes.
##The default value is 0(Don't handle terminated values)
account.1.mwi_parse_terminated =

##It configures the interval (in seconds) of MWI subscription for account
X.
##The default value is 3600.
account.1.subscribe_mwi_expires =

##It enables or disables the phone to subscribe to the voice mail number
for the message waiting indicator for account X.0-Disabled,1-Enabled.
##The default value is 0.
account.1.subscribe_mwi_to_vm =

#####
#####
##
##                               SCA
##
#####
#####
##It enables or disables Broadsoft SCA feature for account X.0-Disabled,1-
Broadsoft SCA.
##The default value is 0.
account.1.shared_line = %BWSHAREDLINE-BINARY-1%

#####
#####
##
##                               BroadSoft Callpark
##
#####
#####
##It enables or disables Broadsoft Callpark for account X.0-Disabled,1-
Broadsoft SCA.
##The default value is 0.
account.1.callpark_enable =

#####
#####
##
##                               Audio Codec
##
#####
#####
account.1.codec.1.enable =
account.1.codec.1.payload_type =
account.1.codec.1.priority =
account.1.codec.1.rtpmap =

account.1.codec.2.enable =
account.1.codec.2.payload_type =
account.1.codec.2.priority =
account.1.codec.2.rtpmap =

account.1.codec.3.enable =
account.1.codec.3.payload_type =
account.1.codec.3.priority =
account.1.codec.3.rtpmap =

account.1.codec.4.enable =
account.1.codec.4.payload_type =
account.1.codec.4.priority =
```

```
account.1.codec.4.rtpmap =

account.1.codec.5.enable =
account.1.codec.5.payload_type =
account.1.codec.5.priority =
account.1.codec.5.rtpmap =

account.1.codec.6.enable =
account.1.codec.6.payload_type =
account.1.codec.6.priority =
account.1.codec.6.rtpmap =

account.1.codec.7.enable =
account.1.codec.7.payload_type =
account.1.codec.7.priority =
account.1.codec.7.rtpmap =

account.1.codec.8.enable =
account.1.codec.8.payload_type =
account.1.codec.8.priority =
account.1.codec.8.rtpmap =

account.1.codec.9.enable =
account.1.codec.9.payload_type =
account.1.codec.9.priority =
account.1.codec.9.rtpmap =

#####
#####
##                               Audio Advanced
##
#####
#####
##It configures whether to use voice encryption service for account X.0-
Disabled,1-Optional,2-Compulsory.
##The default value is 0.
account.1.srtp_encryption =

##It configures the RTP packet time for account X.0 (Disabled), 10, 20,
30, 40, 50 or 60.
##The default value is 20.
account.1.ptime =

#####
#####
##                               Anonymous Call
##
#####
#####
account.1.anonymous_call_mode =
account.1.reject_anonymous_call_mode =
account.1.anonymous_call =
account.1.reject_anonymous_call = %REJECT_ANONYMOUS_CALL_BINARY%

#####
#####
##                               DTMF
##
#####
#####
account.1.dtmf.type =
```

```
account.1.dtmf.info_type =
account.1.dtmf.dtmf_payload =

#####
#####
##                               Conference
##
#####
#####
##It configures the conference type for account X.0-Local Conference,2-
Network Conference.
##The default value is 0.
account.1.conf_type =

##It configures the network conference URI for account X.
##The default value is blank.
account.1.conf_uri = %BWNWORK-CONFERENCE-SIPURI-1%

#####
#####
##                               CID Source
##
#####
#####
account.1.cid_source =
account.1.cid_source_privacy =
account.1.cid_source_ppi =
account.1.cp_source =

#####
#####
##                               Session Timer
##
#####
#####
account.1.session_timer.enable =
account.1.session_timer.expires =
account.1.session_timer.refresher =

#####
#####
##                               Advanced
##
#####
#####

account.1.100rel_enable =
account.1.enable_user_equal_phone =
account.1.compact_header_enable =
account.1.custom_ua =

#####
#####
##                               DND
##
#####
#####

#Enable or disable the DND feautre for account2; 0-Disabled (default), 1-
Enabled;
account.1.dnd.enable =
```

```
#####
#####
##                               Call Forward
##
#####
#####
#Enable or disable the always forward, 0-Disabled(default), 1-Enabled;
account.1.always_fwd.enable =

#Configure the target phonenumber that the phone will forward the call to;
account.1.always_fwd.target =

#Enable or disable the busy forward, 0-Disabled(default), 1-Enabled;
account.1.busy_fwd.enable =
account.1.busy_fwd.target =

#Enable or disable the no answer forward, 0-Disabled(default), 1-Enabled;
#Configure the waiting ring times before forwarding, ranges from 0 to 20
(by default);
account.1.timeout_fwd.enable =
account.1.timeout_fwd.target =
account.1.timeout_fwd.timeout =

#####
#####
##                               Broadsoft XSI
##
#####
#####
##It configures the user name for XSI authentication for account
X.Example:account.1.xsi.user = 3502@as.iopl.broadworks.net.
##The default value is blank.
account.1.xsi.user = %BWLOGIN-ID-1%

##It configures the password for XSI authentication for account
X.Example:account.1.xsi.password = 123456.
##The default value is blank.
account.1.xsi.password = %XSIPASSWORD-1%

##It configures the access URL of the Xtended Services Platform server for
account X.Example:account.1.xsi.host = xspl.iopl.broadworks.net.
##The default value is blank.
account.1.xsi.host = %XSP_ADDRESS%

##It configures the server type of the Xtended Services Platform server
for account X.Example:account.1.xsi.server_type = http.
##The default value is http.
account.1.xsi.server_type =

##It configures the server port of the Xtended Services Platform server
for account X.Example:account.1.xsi.port = 80.
##The default value is 80.Integer from 1 to 65535
account.1.xsi.port =

#####
#####
##                               Account2 Basic Settings
##
#####
#####
account.2.enable = %BWLIN-BINARY-2%
account.2.label = %BWEXTENSION-2%
account.2.display_name = %BWCLID-2%
```

```
account.2.auth_name = %BWAUTHUSER-2%
account.2.user_name = %BWLINPORT-2%
account.2.password = %BWAUTHPASSWORD-2%
account.2.outbound_proxy_enable = %USE_SBC_BOOLEAN%
account.2.outbound_host = %SBC_ADDRESS%
account.2.outbound_port = %SBC_PORT%
account.2.backup_outbound_host =
account.2.backup_outbound_port =
account.2.outbound_proxy_fallback_interval =

##It configures the transport type. 0-UDP,1-TCP,2-TLS,3-DNS-NAPTR
##The default value is 0.
account.2.sip_server.1.transport_type =
##It configures the backup server transport type. 0-UDP,1-TCP,2-TLS,3-DNS-
NAPTR
##The default value is 0.
account.2.sip_server.2.transport_type =

#####
#####
##                               Failback
##
#####
#####
account.2.naptr_build =
account.2.fallback.redundancy_type =
account.2.fallback.timeout =
account.2.sip_server.1.address = %BWHOST-2%
account.2.sip_server.1.port =
account.2.sip_server.1.expires =
account.2.sip_server.1.retry_counts =
account.2.sip_server.1.failback_mode =
account.2.sip_server.1.failback_timeout =
account.2.sip_server.1.register_on_enable =

account.2.sip_server.2.address =
account.2.sip_server.2.port =
account.2.sip_server.2.expires =
account.2.sip_server.2.retry_counts =
account.2.sip_server.2.failback_mode =
account.2.sip_server.2.failback_timeout =
account.2.sip_server.2.register_on_enable =

account.2.dns_cache_type =
account.2.static_cache_pri =
account.2.register_expires_overlap =
account.2.subscribe_expires_overlap =

#####
#####
##                               Register Advanced
##
#####
#####
##It configures the SIP server type for account X.0-Default,2-BroadSoft,4-
Cosmocom,6-UCAP
##The default value is 0.

account.2.sip_server_type = 2

account.2.unregister_on_reboot =
account.2.proxy_require =
account.2.srv_ttl_timer_enable =
```



```
account.2.register_mac =
account.2.register_line =
account.2.reg_fail_retry_interval =

#####
#####
##                               NAT Settings
##
#####
#####

#Enable or disable the NAT traversal; 0-Disabled (default), 1-STUN;
account.2.nat.nat_traversal =

##It configures the IP address or domain name of the STUN server for
account X.
##The default value is blank.
##V80 do not support
account.2.nat.stun_server =

##It configures the port of the STUN server for account X.
##The default value is 3478.
##V80 do not support
account.2.nat.stun_port =

#Enable or disable the NAT keep-alive; 0-Disabled, 1-Enabled (default);
account.2.nat.udp_update_enable =

#Specify the keep-alive interval (in seconds), the default value is 30.
account.2.nat.udp_update_time =

#Enable or disable the NAT Rport; 0-Disabled (default), 1-Enabled;
account.2.nat.rport =

#####
#####
##                               Account2 Advance Settings
##
##
#####
#####

##It configures the voice mail number for account X.
##The default value is blank.
voice_mail.number.2 = %BWVOICE-PORTAL-NUMBER-2%

account.2.auto_dial_enable =
account.2.auto_dial_num =

account.2.call_id_mode =
account.2.call_info =

#####
#####
##                               Subscribe
##
##
#####
#####

##It enables or disables the phone to subscribe the message waiting
indicator for account X.0-Disabled,1-Enabled.
##The default value is 0.
account.2.subscribe_mwi =
```

```
##It is configuration MWI is NOTIFY messages, whether in Terminated status
attributes.
##The default value is 0(Don't handle terminated values)
account.2.mwi_parse_terminated =

##It configures the interval (in seconds) of MWI subscription for account
X.
##The default value is 3600.
account.2.subscribe_mwi_expires =

##It enables or disables the phone to subscribe to the voice mail number
for the message waiting indicator for account X.0-Disabled,1-Enabled.
##The default value is 0.
account.2.subscribe_mwi_to_vm =

#####
#####
##
##                               SCA
##
#####
#####
##It enables or disables Broadsoft SCA feature for account X.0-Disabled,1-
Broadsoft SCA.
##The default value is 0.
account.2.shared_line = %BWSHAREDLINE-BINARY-2%

#####
#####
##
##                               BroadSoft Callpark
##
#####
#####
##It enables or disables Broadsoft Callpark for account X.0-Disabled,1-
Broadsoft SCA.
##The default value is 0.
account.2.callpark_enable =

#####
#####
##
##                               Audio Codec
##
#####
#####
account.2.codec.1.enable =
account.2.codec.1.payload_type =
account.2.codec.1.priority =
account.2.codec.1.rtpmap =

account.2.codec.2.enable =
account.2.codec.2.payload_type =
account.2.codec.2.priority =
account.2.codec.2.rtpmap =

account.2.codec.3.enable =
account.2.codec.3.payload_type =
account.2.codec.3.priority =
account.2.codec.3.rtpmap =

account.2.codec.4.enable =
account.2.codec.4.payload_type =
account.2.codec.4.priority =
```

```
account.2.codec.4.rtpmap =

account.2.codec.5.enable =
account.2.codec.5.payload_type =
account.2.codec.5.priority =
account.2.codec.5.rtpmap =

account.2.codec.6.enable =
account.2.codec.6.payload_type =
account.2.codec.6.priority =
account.2.codec.6.rtpmap =

account.2.codec.7.enable =
account.2.codec.7.payload_type =
account.2.codec.7.priority =
account.2.codec.7.rtpmap =

account.2.codec.8.enable =
account.2.codec.8.payload_type =
account.2.codec.8.priority =
account.2.codec.8.rtpmap =

account.2.codec.9.enable =
account.2.codec.9.payload_type =
account.2.codec.9.priority =
account.2.codec.9.rtpmap =

#####
#####
##                               Audio Advanced
##
#####
#####
##It configures whether to use voice encryption service for account X.0-
Disabled,1-Optional,2-Compulsory.
##The default value is 0.
account.2.srtp_encryption =

##It configures the RTP packet time for account X.0 (Disabled), 10, 20,
30, 40, 50 or 60.
##The default value is 20.
account.2.ptime =

#####
#####
##                               Anonymous Call
##
#####
#####
account.2.anonymous_call_mode =
account.2.reject_anonymous_call_mode =
account.2.anonymous_call =
account.2.reject_anonymous_call = %REJECT_ANONYMOUS_CALL_BINARY%

#####
#####
##                               DTMF
##
#####
#####
account.2.dtmf.type =
```

```
account.2.dtmf.info_type =
account.2.dtmf.dtmf_payload =

#####
#####
##                               Conference
##
#####
#####
##It configures the conference type for account X.0-Local Conference,2-
Network Conference.
##The default value is 0.
account.2.conf_type =

##It configures the network conference URI for account X.
##The default value is blank.
account.2.conf_uri = %BNETWORK-CONFERENCE-SIPURI-2%

#####
#####
##                               CID Source
##
#####
#####
account.2.cid_source =
account.2.cid_source_privacy =
account.2.cid_source_ppi =
account.2.cp_source =

#####
#####
##                               Session Timer
##
#####
#####
account.2.session_timer.enable =
account.2.session_timer.expires =
account.2.session_timer.refresher =

#####
#####
##                               Advanced
##
#####
#####

account.2.100rel_enable =
account.2.enable_user_equal_phone =
account.2.compact_header_enable =
account.2.custom_ua =

#####
#####
##                               DND
##
#####
#####

#Enable or disable the DND feautre for account2; 0-Disabled (default), 1-
Enabled;
account.2.dnd.enable =
```

```

#####
#####
##                               Call Forward
##
#####
#####
#Enable or disable the always forward, 0-Disabled(default), 1-Enabled;
account.2.always_fwd.enable =

#Configure the target phonenumber that the phone will forward the call to;
account.2.always_fwd.target =

#Enable or disable the busy forward, 0-Disabled(default), 1-Enabled;
account.2.busy_fwd.enable =
account.2.busy_fwd.target =

#Enable or disable the no answer forward, 0-Disabled(default), 1-Enabled;
#Configure the waiting ring times before forwarding, ranges from 0 to 20
(by default);
account.2.timeout_fwd.enable =
account.2.timeout_fwd.target =
account.2.timeout_fwd.timeout =

#####
#####
##                               Broadsoft XSI
##
#####
#####
##It configures the user name for XSI authentication for account
X.Example:account.2.xsi.user = 3502@as.iopl.broadworks.net.
##The default value is blank.
account.2.xsi.user = %BWLOGIN-ID-2%

##It configures the password for XSI authentication for account
X.Example:account.2.xsi.password = 123456.
##The default value is blank.
account.2.xsi.password = %XSIPASSWORD-2%

##It configures the access URL of the Xtended Services Platform server for
account X.Example:account.2.xsi.host = xspl.iopl.broadworks.net.
##The default value is blank.
account.2.xsi.host = %XSP_ADDRESS%

##It configures the server type of the Xtended Services Platform server
for account X.Example:account.2.xsi.server_type = http.
##The default value is http.
account.2.xsi.server_type =

##It configures the server port of the Xtended Services Platform server
for account X.Example:account.2.xsi.port = 80.
##The default value is 80.Integer from 1 to 65535
account.2.xsi.port =

#####
#####
##                               Account3 Basic Settings
##
#####
#####
account.3.enable = %BWLIN-BINARY-3%

```

```
account.3.label = %BWEXTENSION-3%
account.3.display_name = %BWCLID-3%
account.3.auth_name = %BWAUTHUSER-3%
account.3.user_name = %BWLINPORT-3%
account.3.password = %BWAUTHPASSWORD-3%
account.3.outbound_proxy_enable = %USE_SBC_BOOLEAN%
account.3.outbound_host = %SBC_ADDRESS%
account.3.outbound_port = %SBC_PORT%
account.3.backup_outbound_host =
account.3.backup_outbound_port =
account.3.outbound_proxy_fallback_interval =

##It configures the transport type. 0-UDP,1-TCP,2-TLS,3-DNS-NAPTR
##The default value is 0.
account.3.sip_server.1.transport_type =
##It configures the backup server transport type. 0-UDP,1-TCP,2-TLS,3-DNS-
NAPTR
##The default value is 0.
account.3.sip_server.2.transport_type =

#####
#####
##                               Failback
##
#####
#####
account.3.naptr_build =
account.3.fallback.redundancy_type =
account.3.fallback.timeout =
account.3.sip_server.1.address = %BWHOST-3%
account.3.sip_server.1.port =
account.3.sip_server.1.expires =
account.3.sip_server.1.retry_counts =
account.3.sip_server.1.fallback_mode =
account.3.sip_server.1.fallback_timeout =
account.3.sip_server.1.register_on_enable =

account.3.sip_server.2.address =
account.3.sip_server.2.port =
account.3.sip_server.2.expires =
account.3.sip_server.2.retry_counts =
account.3.sip_server.2.fallback_mode =
account.3.sip_server.2.fallback_timeout =
account.3.sip_server.2.register_on_enable =

account.3.dns_cache_type =
account.3.static_cache_pri =
account.3.register_expires_overlap =
account.3.subscribe_expires_overlap =

#####
#####
##                               Register Advanced
##
#####
#####
##It configures the SIP server type for account X.0-Default,2-BroadSoft,4-
Cosmocom,6-UCAP
##The default value is 0.

account.3.sip_server_type = 2

account.3.unregister_on_reboot =
```

```
account.3.proxy_require =
account.3.srv_ttl_timer_enable =
account.3.register_mac =
account.3.register_line =
account.3.reg_fail_retry_interval =

#####
#####
##
##                               NAT Settings
##
#####
#####

#Enable or disable the NAT traversal; 0-Disabled (default), 1-STUN;
account.3.nat.nat_traversal =

##It configures the IP address or domain name of the STUN server for
account X.
##The default value is blank.
##V80 do not support
account.3.nat.stun_server =

##It configures the port of the STUN server for account X.
##The default value is 3478.
##V80 do not support
account.3.nat.stun_port =

#Enable or disable the NAT keep-alive; 0-Disabled, 1-Enabled (default);
account.3.nat.udp_update_enable =

#Specify the keep-alive interval (in seconds), the default value is 30.
account.3.nat.udp_update_time =

#Enable or disable the NAT Rport; 0-Disabled (default), 1-Enabled;
account.3.nat.rport =

#####
#####
##
##                               Account3 Advance Settings
##
#####
#####

##It configures the voice mail number for account X.
##The default value is blank.
voice_mail.number.3 = %BWVOICE-PORTAL-NUMBER-3%

account.3.auto_dial_enable =
account.3.auto_dial_num =

account.3.call_id_mode =
account.3.call_info =

#####
#####
##
##                               Subscribe
##
#####
#####

##It enables or disables the phone to subscribe the message waiting
indicator for account X.0-Disabled,1-Enabled.
##The default value is 0.
```

```
account.3.subscribe_mwi =

##It is configuration MWI is NOTIFY messages, whether in Terminated status
attributes.
##The default value is 0(Don't handle terminated values)
account.3.mwi_parse_terminated =

##It configures the interval (in seconds) of MWI subscription for account
X.
##The default value is 3600.
account.3.subscribe_mwi_expires =

##It enables or disables the phone to subscribe to the voice mail number
for the message waiting indicator for account X.0-Disabled,1-Enabled.
##The default value is 0.
account.3.subscribe_mwi_to_vm =

#####
#####
##
##                               SCA
##
#####
#####
##It enables or disables Broadsoft SCA feature for account X.0-Disabled,1-
Broadsoft SCA.
##The default value is 0.
account.3.shared_line = %BWSHAREDLINE-BINARY-3%

#####
#####
##
##                               BroadSoft Callpark
##
#####
#####
##It enables or disables Broadsoft Callpark for account X.0-Disabled,1-
Broadsoft SCA.
##The default value is 0.
account.3.callpark_enable =

#####
#####
##
##                               Audio Codec
##
#####
#####
account.3.codec.1.enable =
account.3.codec.1.payload_type =
account.3.codec.1.priority =
account.3.codec.1.rtpmap =

account.3.codec.2.enable =
account.3.codec.2.payload_type =
account.3.codec.2.priority =
account.3.codec.2.rtpmap =

account.3.codec.3.enable =
account.3.codec.3.payload_type =
account.3.codec.3.priority =
account.3.codec.3.rtpmap =

account.3.codec.4.enable =
```



```
account.3.codec.4.payload_type =
account.3.codec.4.priority =
account.3.codec.4.rtpmap =

account.3.codec.5.enable =
account.3.codec.5.payload_type =
account.3.codec.5.priority =
account.3.codec.5.rtpmap =

account.3.codec.6.enable =
account.3.codec.6.payload_type =
account.3.codec.6.priority =
account.3.codec.6.rtpmap =

account.3.codec.7.enable =
account.3.codec.7.payload_type =
account.3.codec.7.priority =
account.3.codec.7.rtpmap =

account.3.codec.8.enable =
account.3.codec.8.payload_type =
account.3.codec.8.priority =
account.3.codec.8.rtpmap =

account.3.codec.9.enable =
account.3.codec.9.payload_type =
account.3.codec.9.priority =
account.3.codec.9.rtpmap =

#####
#####
##                               Audio Advanced
##
#####
#####
##It configures whether to use voice encryption service for account X.0-
Disabled,1-Optional,2-Compulsory.
##The default value is 0.
account.3.srtp_encryption =

##It configures the RTP packet time for account X.0 (Disabled), 10, 20,
30, 40, 50 or 60.
##The default value is 20.
account.3.ptime =

#####
#####
##                               Anonymous Call
##
#####
#####
account.3.anonymous_call_mode =
account.3.reject_anonymous_call_mode =
account.3.anonymous_call =
account.3.reject_anonymous_call = %REJECT_ANONYMOUS_CALL_BINARY%

#####
#####
##                               DTMF
##
```

```
#####
#####
account.3.dtmf.type =
account.3.dtmf.info_type =
account.3.dtmf.dtmf_payload =

#####
#####
##                               Conference
##
#####
#####
##It configures the conference type for account X.0-Local Conference,2-
Network Conference.
##The default value is 0.
account.3.conf_type =

##It configures the network conference URI for account X.
##The default value is blank.
account.3.conf_uri = %BNETWORK-CONFERENCE-SIPURI-3%

#####
#####
##                               CID Source
##
#####
#####
account.3.cid_source =
account.3.cid_source_privacy =
account.3.cid_source_ppi =
account.3.cp_source =

#####
#####
##                               Session Timer
##
#####
#####
account.3.session_timer.enable =
account.3.session_timer.expires =
account.3.session_timer.refresher =

#####
#####
##                               Advanced
##
#####
#####

account.3.100rel_enable =
account.3.enable_user_equal_phone =
account.3.compact_header_enable =
account.3.custom_ua =

#####
#####
##                               DND
##
#####
#####

#Enable or disable the DND feautre for Account3; 0-Disabled (default), 1-
Enabled;
```

```

account.3.dnd.enable =

#####
#####
##          Call Forward
##
#####
#####
#Enable or disable the always forward, 0-Disabled(default), 1-Enabled;
account.3.always_fwd.enable =

#Configure the target phonenumber that the phone will forward the call to;
account.3.always_fwd.target =

#Enable or disable the busy forward, 0-Disabled(default), 1-Enabled;
account.3.busy_fwd.enable =
account.3.busy_fwd.target =

#Enable or disable the no answer forward, 0-Disabled(default), 1-Enabled;
#Configure the waiting ring times before forwarding, ranges from 0 to 20
#(by default);
account.3.timeout_fwd.enable =
account.3.timeout_fwd.target =
account.3.timeout_fwd.timeout =

#####
#####
##          Broadsoft XSI
##
#####
#####
##It configures the user name for XSI authentication for account
X.Example:account.3.xsi.user = 3502@as.iopl.broadworks.net.
##The default value is blank.
account.3.xsi.user = %BWLOGIN-ID-3%

##It configures the password for XSI authentication for account
X.Example:account.3.xsi.password = 123456.
##The default value is blank.
account.3.xsi.password = %XSIPASSWORD-3%

##It configures the access URL of the Xtended Services Platform server for
account X.Example:account.3.xsi.host = xspl.iopl.broadworks.net.
##The default value is blank.
account.3.xsi.host = %XSP_ADDRESS%

##It configures the server type of the Xtended Services Platform server
for account X.Example:account.3.xsi.server_type = http.
##The default value is http.
account.3.xsi.server_type =

##It configures the server port of the Xtended Services Platform server
for account X.Example:account.3.xsi.port = 80.
##The default value is 80.Integer from 1 to 65535
account.3.xsi.port =

#####
#####
##          Account4 Basic Settings
##

```

```

#####
#####
account.4.enable = %BWLIN-BINARY-4%
account.4.label = %BWEXTENSION-4%
account.4.display_name = %BWCLID-4%
account.4.auth_name = %BWAUTHUSER-4%
account.4.user_name = %BWLINPORT-4%
account.4.password = %BWAUTHPASSWORD-4%
account.4.outbound_proxy_enable = %USE_SBC_BOOLEAN%
account.4.outbound_host = %SBC_ADDRESS%
account.4.outbound_port = %SBC_PORT%
account.4.backup_outbound_host =
account.4.backup_outbound_port =
account.4.outbound_proxy_fallback_interval =

##It configures the transport type. 0-UDP,1-TCP,2-TLS,3-DNS-NAPTR
##The default value is 0.
account.4.sip_server.1.transport_type =
##It configures the backup server transport type. 0-UDP,1-TCP,2-TLS,3-DNS-
NAPTR
##The default value is 0.
account.4.sip_server.2.transport_type =

#####
#####
##                               Failback
##
#####
#####
account.4.naptr_build =
account.4.fallback.redundancy_type =
account.4.fallback.timeout =
account.4.sip_server.1.address = %BWHOST-4%
account.4.sip_server.1.port =
account.4.sip_server.1.expires =
account.4.sip_server.1.retry_counts =
account.4.sip_server.1.failback_mode =
account.4.sip_server.1.failback_timeout =
account.4.sip_server.1.register_on_enable =

account.4.sip_server.2.address =
account.4.sip_server.2.port =
account.4.sip_server.2.expires =
account.4.sip_server.2.retry_counts =
account.4.sip_server.2.failback_mode =
account.4.sip_server.2.failback_timeout =
account.4.sip_server.2.register_on_enable =

account.4.dns_cache_type =
account.4.static_cache_pri =
account.4.register_expires_overlap =
account.4.subscribe_expires_overlap =

#####
#####
##                               Register Advanced
##
#####
#####
##It configures the SIP server type for account X.0-Default,2-BroadSoft,4-
Cosmocom,6-UCAP
##The default value is 0.

```

```

account.4.sip_server_type = 2

account.4.unregister_on_reboot =
account.4.proxy_require =
account.4.srv_ttl_timer_enable =
account.4.register_mac =
account.4.register_line =
account.4.reg_fail_retry_interval =

#####
#####
##
##                               NAT Settings
##
#####
#####

#Enable or disable the NAT traversal; 0-Disabled (default), 1-STUN;
account.4.nat.nat_traversal =

##It configures the IP address or domain name of the STUN server for
account X.
##The default value is blank.
##V80 do not support
account.4.nat.stun_server =

##It configures the port of the STUN server for account X.
##The default value is 3478.
##V80 do not support
account.4.nat.stun_port =

#Enable or disable the NAT keep-alive; 0-Disabled, 1-Enabled (default);
account.4.nat.udp_update_enable =

#Specify the keep-alive interval (in seconds), the default value is 30.
account.4.nat.udp_update_time =

#Enable or disable the NAT Rport; 0-Disabled (default), 1-Enabled;
account.4.nat.rport =

#####
#####
##
##                               Account4 Advance Settings
##
#####
#####

##It configures the voice mail number for account X.
##The default value is blank.
voice_mail.number.4 = %BWVOICE-PORTAL-NUMBER-4%

account.4.auto_dial_enable =
account.4.auto_dial_num =

account.4.call_id_mode =
account.4.call_info =

#####
#####
##
##                               Subscribe
##
#####
#####

```

```
##It enables or disables the phone to subscribe the message waiting
indicator for account X.0-Disabled,1-Enabled.
##The default value is 0.
account.4.subscribe_mwi =

##It is configuration MWI is NOTIFY messages, whether in Terminated status
attributes.
##The default value is 0(Don't handle terminated values)
account.4.mwi_parse_terminated =

##It configures the interval (in seconds) of MWI subscription for account
X.
##The default value is 3600.
account.4.subscribe_mwi_expires =

##It enables or disables the phone to subscribe to the voice mail number
for the message waiting indicator for account X.0-Disabled,1-Enabled.
##The default value is 0.
account.4.subscribe_mwi_to_vm =

#####
#####
##
##
##
#####
#####
##It enables or disables Broadsoft SCA feature for account X.0-Disabled,1-
Broadsoft SCA.
##The default value is 0.
account.4.shared_line = %BWSHAREDLINE-BINARY-4%

#####
#####
##
##
##
#####
#####
##It enables or disables Broadsoft Callpark for account X.0-Disabled,1-
Broadsoft SCA.
##The default value is 0.
account.4.callpark_enable =

#####
#####
##
##
##
#####
#####
account.4.codec.1.enable =
account.4.codec.1.payload_type =
account.4.codec.1.priority =
account.4.codec.1.rtpmap =

account.4.codec.2.enable =
account.4.codec.2.payload_type =
account.4.codec.2.priority =
account.4.codec.2.rtpmap =

account.4.codec.3.enable =
account.4.codec.3.payload_type =
account.4.codec.3.priority =
```

```
account.4.codec.3.rtpmap =

account.4.codec.4.enable =
account.4.codec.4.payload_type =
account.4.codec.4.priority =
account.4.codec.4.rtpmap =

account.4.codec.5.enable =
account.4.codec.5.payload_type =
account.4.codec.5.priority =
account.4.codec.5.rtpmap =

account.4.codec.6.enable =
account.4.codec.6.payload_type =
account.4.codec.6.priority =
account.4.codec.6.rtpmap =

account.4.codec.7.enable =
account.4.codec.7.payload_type =
account.4.codec.7.priority =
account.4.codec.7.rtpmap =

account.4.codec.8.enable =
account.4.codec.8.payload_type =
account.4.codec.8.priority =
account.4.codec.8.rtpmap =

account.4.codec.9.enable =
account.4.codec.9.payload_type =
account.4.codec.9.priority =
account.4.codec.9.rtpmap =

#####
#####
##                               Audio Advanced
##
#####
#####
##It configures whether to use voice encryption service for account X.0-
Disabled,1-Optional,2-Compulsory.
##The default value is 0.
account.4.srtp_encryption =

##It configures the RTP packet time for account X.0 (Disabled), 10, 20,
30, 40, 50 or 60.
##The default value is 20.
account.4.ptime =

#####
#####
##                               Anonymous Call
##
#####
#####
account.4.anonymous_call_mode =
account.4.reject_anonymous_call_mode =
account.4.anonymous_call =
account.4.reject_anonymous_call = %REJECT_ANONYMOUS_CALL_BINARY%

#####
#####
```

```
##                               DTMF
##
#####
#####
account.4.dtmf.type =
account.4.dtmf.info_type =
account.4.dtmf.dtmf_payload =

#####
#####
##                               Conference
##
#####
#####
##It configures the conference type for account X.0-Local Conference,2-
Network Conference.
##The default value is 0.
account.4.conf_type =

##It configures the network conference URI for account X.
##The default value is blank.
account.4.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-4%

#####
#####
##                               CID Source
##
#####
#####
account.4.cid_source =
account.4.cid_source_privacy =
account.4.cid_source_ppi =
account.4.cp_source =

#####
#####
##                               Session Timer
##
#####
#####
account.4.session_timer.enable =
account.4.session_timer.expires =
account.4.session_timer.refresher =

#####
#####
##                               Advanced
##
#####
#####
account.4.100rel_enable =
account.4.enable_user_equal_phone =
account.4.compact_header_enable =
account.4.custom_ua =

#####
#####
##                               DND
##
#####
#####
```



```

#Enable or disable the DND feautre for Account4; 0-Disabled (default), 1-
Enabled;
account.4.dnd.enable =

#####
#####
##                               Call Forward
##
#####
#####
#Enable or disable the always forward, 0-Disabled(default), 1-Enabled;
account.4.always_fwd.enable =

#Configure the target phonenumber that the phone will forward the call to;
account.4.always_fwd.target =

#Enable or disable the busy forward, 0-Disabled(default), 1-Enabled;
account.4.busy_fwd.enable =
account.4.busy_fwd.target =

#Enable or disable the no answer forward, 0-Disabled(default), 1-Enabled;
#Configure the waiting ring times before forwarding, ranges from 0 to 20
(by default);
account.4.timeout_fwd.enable =
account.4.timeout_fwd.target =
account.4.timeout_fwd.timeout =

#####
#####
##                               Broadsoft XSI
##
#####
#####
##It configures the user name for XSI authentication for account
X.Example:account.4.xsi.user = 3502@as.iopl.broadworks.net.
##The default value is blank.
account.4.xsi.user = %BWLOGIN-ID-4%

##It configures the password for XSI authentication for account
X.Example:account.4.xsi.password = 123456.
##The default value is blank.
account.4.xsi.password = %XSIPASSWORD-4%

##It configures the access URL of the Xtended Services Platform server for
account X.Example:account.4.xsi.host = xspl.iopl.broadworks.net.
##The default value is blank.
account.4.xsi.host = %XSP_ADDRESS%

##It configures the server type of the Xtended Services Platform server
for account X.Example:account.4.xsi.server_type = http.
##The default value is http.
account.4.xsi.server_type =

##It configures the server port of the Xtended Services Platform server
for account X.Example:account.4.xsi.port = 80.
##The default value is 80.Integer from 1 to 65535
account.4.xsi.port =

#####
#####

```

```
##                                     Account5 Basic Settings
##
#####
#####
account.5.enable = %BWLIN-BINARY-5%
account.5.label = %BWEXTENSION-5%
account.5.display_name = %BWCLID-5%
account.5.auth_name = %BWAUTHUSER-5%
account.5.user_name = %BWLINPORT-5%
account.5.password = %BWAUTHPASSWORD-5%
account.5.outbound_proxy_enable = %USE_SBC_BOOLEAN%
account.5.outbound_host = %SBC_ADDRESS%
account.5.outbound_port = %SBC_PORT%
account.5.backup_outbound_host =
account.5.backup_outbound_port =
account.5.outbound_proxy_fallback_interval =

##It configures the transport type. 0-UDP,1-TCP,2-TLS,3-DNS-NAPTR
##The default value is 0.
account.5.sip_server.1.transport_type =
##It configures the backup server transport type. 0-UDP,1-TCP,2-TLS,3-DNS-
NAPTR
##The default value is 0.
account.5.sip_server.2.transport_type =

#####
#####
##                                     Failback
##
#####
#####
account.5.naptr_build =
account.5.failback.redundancy_type =
account.5.failback.timeout =
account.5.sip_server.1.address = %BWHOST-5%
account.5.sip_server.1.port =
account.5.sip_server.1.expires =
account.5.sip_server.1.retry_counts =
account.5.sip_server.1.failback_mode =
account.5.sip_server.1.failback_timeout =
account.5.sip_server.1.register_on_enable =

account.5.sip_server.2.address =
account.5.sip_server.2.port =
account.5.sip_server.2.expires =
account.5.sip_server.2.retry_counts =
account.5.sip_server.2.failback_mode =
account.5.sip_server.2.failback_timeout =
account.5.sip_server.2.register_on_enable =

account.5.dns_cache_type =
account.5.static_cache_pri =
account.5.register_expires_overlap =
account.5.subscribe_expires_overlap =

#####
#####
##                                     Register Advanced
##
#####
#####
##It configures the SIP server type for account X.0-Default,2-BroadSoft,4-
Cosmocom,6-UCAP
```

```
##The default value is 0.

account.5.sip_server_type = 2

account.5.unregister_on_reboot =
account.5.proxy_require =
account.5.srv_ttl_timer_enable =
account.5.register_mac =
account.5.register_line =
account.5.reg_fail_retry_interval =

#####
#####
##                               NAT Settings
##
#####
#####

#Enable or disable the NAT traversal; 0-Disabled (default), 1-STUN;
account.5.nat.nat_traversal =

##It configures the IP address or domain name of the STUN server for
account X.
##The default value is blank.
##V80 do not support
account.5.nat.stun_server =

##It configures the port of the STUN server for account X.
##The default value is 3478.
##V80 do not support
account.5.nat.stun_port =

#Enable or disable the NAT keep-alive; 0-Disabled, 1-Enabled (default);
account.5.nat.udp_update_enable =

#Specify the keep-alive interval (in seconds), the default value is 30.
account.5.nat.udp_update_time =

#Enable or disable the NAT Rport; 0-Disabled (default), 1-Enabled;
account.5.nat.rport =

#####
#####
##                               Account5 Advance Settings
##
#####
#####

##It configures the voice mail number for account X.
##The default value is blank.
voice_mail.number.5 = %BWVOICE-PORTAL-NUMBER-5%

account.5.auto_dial_enable =
account.5.auto_dial_num =

account.5.call_id_mode =
account.5.call_info =

#####
#####
##                               Subscribe
##
```

```
#####
#####
##It enables or disables the phone to subscribe the message waiting
indicator for account X.0-Disabled,1-Enabled.
##The default value is 0.
account.5.subscribe_mwi =

##It is configuration MWI is NOTIFY messages, whether in Terminated status
attributes.
##The default value is 0(Don't handle terminated values)
account.5.mwi_parse_terminated =

##It configures the interval (in seconds) of MWI subscription for account
X.
##The default value is 3600.
account.5.subscribe_mwi_expires =

##It enables or disables the phone to subscribe to the voice mail number
for the message waiting indicator for account X.0-Disabled,1-Enabled.
##The default value is 0.
account.5.subscribe_mwi_to_vm =

#####
#####
##
##                               SCA
##
#####
#####
##It enables or disables Broadsoft SCA feature for account X.0-Disabled,1-
Broadsoft SCA.
##The default value is 0.
account.5.shared_line = %BWSHAREDLINE-BINARY-5%

#####
#####
##
##                               BroadSoft Callpark
##
#####
#####
##It enables or disables Broadsoft Callpark for account X.0-Disabled,1-
Broadsoft SCA.
##The default value is 0.
account.5.callpark_enable =

#####
#####
##
##                               Audio Codec
##
#####
#####
account.5.codec.1.enable =
account.5.codec.1.payload_type =
account.5.codec.1.priority =
account.5.codec.1.rtpmap =

account.5.codec.2.enable =
account.5.codec.2.payload_type =
account.5.codec.2.priority =
account.5.codec.2.rtpmap =

account.5.codec.3.enable =
```

```
account.5.codec.3.payload_type =
account.5.codec.3.priority =
account.5.codec.3.rtpmap =

account.5.codec.4.enable =
account.5.codec.4.payload_type =
account.5.codec.4.priority =
account.5.codec.4.rtpmap =

account.5.codec.5.enable =
account.5.codec.5.payload_type =
account.5.codec.5.priority =
account.5.codec.5.rtpmap =

account.5.codec.6.enable =
account.5.codec.6.payload_type =
account.5.codec.6.priority =
account.5.codec.6.rtpmap =

account.5.codec.7.enable =
account.5.codec.7.payload_type =
account.5.codec.7.priority =
account.5.codec.7.rtpmap =

account.5.codec.8.enable =
account.5.codec.8.payload_type =
account.5.codec.8.priority =
account.5.codec.8.rtpmap =

account.5.codec.9.enable =
account.5.codec.9.payload_type =
account.5.codec.9.priority =
account.5.codec.9.rtpmap =

#####
#####
##                               Audio Advanced
##
#####
#####
##It configures whether to use voice encryption service for account X.0-
Disabled,1-Optional,2-Compulsory.
##The default value is 0.
account.5.srtp_encryption =

##It configures the RTP packet time for account X.0 (Disabled), 10, 20,
30, 40, 50 or 60.
##The default value is 20.
account.5.ptime =

#####
#####
##                               Anonymous Call
##
#####
#####
account.5.anonymous_call_mode =
account.5.reject_anonymous_call_mode =
account.5.anonymous_call =
account.5.reject_anonymous_call = %REJECT_ANONYMOUS_CALL_BINARY%
```

```
#####
#####
##                               DTMF
##
#####
#####
account.5.dtmf.type =
account.5.dtmf.info_type =
account.5.dtmf.dtmf_payload =

#####
#####
##                               Conference
##
#####
#####
##It configures the conference type for account X.0-Local Conference,2-
Network Conference.
##The default value is 0.
account.5.conf_type =

##It configures the network conference URI for account X.
##The default value is blank.
account.5.conf_uri = %BWNETWORK-CONFERENCE-SIPURI-5%

#####
#####
##                               CID Source
##
#####
#####
account.5.cid_source =
account.5.cid_source_privacy =
account.5.cid_source_ppi =
account.5.cp_source =

#####
#####
##                               Session Timer
##
#####
#####
account.5.session_timer.enable =
account.5.session_timer.expires =
account.5.session_timer.refresher =

#####
#####
##                               Advanced
##
#####
#####
account.5.100rel_enable =
account.5.enable_user_equal_phone =
account.5.compact_header_enable =
account.5.custom_ua =

#####
#####
##                               DND
##
##
```

```

#####
#####
#Enable or disable the DND feautre for Account5; 0-Disabled (default), 1-
Enabled;
account.5.dnd.enable =

#####
#####
##                               Call Forward
##
#####
#####
#Enable or disable the always forward, 0-Disabled(default), 1-Enabled;
account.5.always_fwd.enable =

#Configure the target phonenumber that the phone will forward the call to;
account.5.always_fwd.target =

#Enable or disable the busy forward, 0-Disabled(default), 1-Enabled;
account.5.busy_fwd.enable =
account.5.busy_fwd.target =

#Enable or disable the no answer forward, 0-Disabled(default), 1-Enabled;
#Configure the waiting ring times before forwarding, ranges from 0 to 20
(by default);
account.5.timeout_fwd.enable =
account.5.timeout_fwd.target =
account.5.timeout_fwd.timeout =

#####
#####
##                               Broadsoft XSI
##
#####
#####
##It configures the user name for XSI authentication for account
X.Example:account.5.xsi.user = 3502@as.iopl.broadworks.net.
##The default value is blank.
account.5.xsi.user = %BWLOGIN-ID-5%

##It configures the password for XSI authentication for account
X.Example:account.5.xsi.password = 123456.
##The default value is blank.
account.5.xsi.password = %XSIPASSWORD-5%

##It configures the access URL of the Xtended Services Platform server for
account X.Example:account.5.xsi.host = xsp1.iopl.broadworks.net.
##The default value is blank.
account.5.xsi.host = %XSP_ADDRESS%

##It configures the server type of the Xtended Services Platform server
for account X.Example:account.5.xsi.server_type = http.
##The default value is http.
account.5.xsi.server_type =

##It configures the server port of the Xtended Services Platform server
for account X.Example:account.5.xsi.port = 80.
##The default value is 80.Integer from 1 to 65535
account.5.xsi.port =

```

```
#####
#####
##                               Broadsoft Setting
##
#####
#####
bw.enable = %FEATURY_BW_DIR%

###It enables or disables feature key synchronization.
###0-Disabled,1-Enabled.
###The default value is 1.
bw.feature_key_sync = %FEATURE_SYNC%

#####
#####
##                               Broadsoft Phonebook
##
#####
#####

###It enables or disables the phone to display the group directory.
###0-Disabled,1-Enabled.
###The default value is 1.
bw_phonebook.group_enable = 1

###It enables or disables the phone to display the personal directory.
###0-Disabled,1-Enabled.
###The default value is 1.
bw_phonebook.personal_enable = 1
###It enables or disables the phone to display the group common directory.
###0-Disabled,1-Enabled.
###The default value is 1.
bw_phonebook.group_common_enable = 1

###It enables or disables the phone to display the enterprise directory.
###0-Disabled,1-Enabled.
###The default value is 1.
bw_phonebook.enterprise_enable = 1
###It enables or disables the phone to display the enterprise common
directory.
###0-Disabled,1-Enabled.
###The default value is 1.
bw_phonebook.enterprise_common_enable = 1
###It configures the display name on the LCD screen for the enterprise
common directory.
###The default value is EnterpriseCommon.
bw_phonebook.enterprise_common_displayname =

###It enables or disables BroadSoft call log feature.
###0-Disabled,1-Enabled.
###The default value is 0.
bw_phonebook.call_log_enable = 1

###It enables or disables custom directory feature.
###0-Disabled,1-Enabled.
###The default value is 0.
bw_phonebook.custom =

###It configures the display name on the LCD screen for the group
directory.
###The default value is Group.
```



```
bw_phonebook.group_displayname = %BWGROUPID-1%
###It configures the display name on the LCD screen for the enterprise
directory.
###The default value is Enterprise.
bw_phonebook.enterprise_displayname = %BWENTERPRISEID-
1%BWSERVICEPROVIDERID-1%

###It configures the display name on the LCD screen for the personal
directory.
###The default value is Personal.
bw_phonebook.personal_displayname =

bw_phonebook.group_common_displayname =

##It configures the interval (in minutes) for the phone to update the data
of the BroadSoft directory from the BroadSoft server.
##The default value is 60.Integer from 2 to 43200
directory.update_time_interval =

#####
#####
##
##
##
#####
#####
###You can choose which park type to use
###0-XSI call park,1-FAC call park default value is 0.
features.call_park.park_mode=
###when you select FAC park, you should input the park FAC code
###default value is blank.
features.call_park.park_code=
###when you select FAC park, you should input the group park FAC code
###default value is blank.
features.call_park.group_park_code=
###when you select FAC park, you should input the retrieve park FAC code
###default value is blank.
features.call_park.park_retrieve_code=

###It enables or disables the phone to display the Park soft key during a
call.
###0-Disabled,1-Enabled.
###The default value is 0.
features.call_park.enable = %FEATURE_BW_CALL_PARK%
###It enables or disables the phone to display the GPark soft key during a
call.
###0-Disabled,1-Enabled.
###The default value is 0.
features.call_park.group_enable = %FEATURE_BW_CALL_PARK%
###It enables or disables the phone to play a warning tone when a call is
parked against its line.
###0-Disabled,1-Enabled.
###The default value is 0.
features.call_park.park_ring = %FEATURE_BW_CALL_PARK%
###It enables or disables the phone to display a parked indicator when a
call is parked against its line.
###0-Disabled,1-Enabled.
###The default value is 0.
features.call_park.park_visual_notify_enable = %FEATURE_BW_CALL_PARK%
```

```
#####  
#####  
##                               Time  
##  
#####  
#####  
##It configures the time zone.For more available time zones, refer to Time  
Zones on page 215.  
##The default value is +8.  
local_time.time_zone = %BWTIMEZONE-1%  
##It configures the time zone name.For more available time zone names,  
refer to Time Zones on page 215.  
##The default time zone name is China(Beijing).  
local_time.time_zone_name = %TIMEZONENAME%  
local_time.ntp_server1 = %SNTP_SERVER_1%  
local_time.ntp_server2 = %SNTP_SERVER_2%  
##It configures the update interval (in seconds) when using the NTP  
server.  
##The default value is 1000.Integer from 15 to 86400  
local_time.interval =  
  
##It enables or disables daylight saving time (DST) feature.  
##0-Disabled,1-Enabled,2-Automatic.  
##The default value is 2.  
local_time.summer_time =  
  
##It configures the way DST works when DST feature is enabled.  
##0-DST By Date ,1-DST By Week.  
##The default value is 0.  
local_time.dst_time_type =  
  
##It configures the start time of the DST.  
##Value formats are:Month/Day/Hour (for By Date),Month/ Day of Week/ Day  
of Week Last in Month/ Hour of Day (for By Week)  
##The default value is 1/1/0.  
local_time.start_time =  
  
##It configures the end time of the DST.  
##Value formats are:Month/Day/Hour (for By Date),Month/ Day of Week/ Day  
of Week Last in Month/ Hour of Day (for By Week)  
##The default value is 12/31/23.  
local_time.end_time =  
  
##It configures the offset time (in minutes).  
##The default value is blank.Integer from -300 to 300  
local_time.offset_time =  
  
##It configures the time format.0-12 Hour,1-24 Hour.  
##The default value is 1.  
local_time.time_format =  
  
local_time.date_format =  
  
##It enables or disables the phone to update time with the offset time  
obtained from the DHCP server.  
##It is only available to offset from GMT 0.0-Disabled,1-Enabled.  
##The default value is 0.  
local_time.dhcp_time =  
  
##It configures the phone to obtain time from NTP server or manual  
settings.0-Manual,1-NTP  
##The default value is 1.
```

```
local_time.manual_time_enable =

##It enables or disables the phone to use manually configured NTP server
preferentially.
##0-Disabled (use the NTP server obtained by DHCP preferentially),1-
Enabled.
##The default value is 0.
local_time.manual_ntp_srv_prior =
auto_dst.url =
http://%BWDEVICEACCESSFQDN%:%BWDEVICEACCESSPORT%/%BWDMSCONTEXT%/%BWDEVICEA
CESSURI%Autodst.xml

#####
#####
##
##                               Tones
##
#####
#####
voice.tone.country = %COUNTRY%
voice.tone.dial =
voice.tone.ring =
voice.tone.busy =
voice.tone.callwaiting =

#####
#####
##
##                               Language Settings
##
#####
#####
#Specify the web language, the valid values are: English, Chinese_S,
German, Italian and Turkish;
lang.wui = %LANGUAGEWEB%

#####
#####
##
##                               Autop
##
#####
#####
auto_provision.server.username = %BWDEVICEUSERNAME%
auto_provision.server.password = %DEVICE_ACCESS_PWD%

#####
#####
##
##                               NETWORK
##
#####
#####
#Configure the WAN port type; 0-DHCP(default), 1-PPPoE, 2-Static IP
Address;
#Require reboot;
network.internet_port.type =
network.internet_port.ip =
network.internet_port.mask =
network.internet_port.gateway =
network.primary_dns= %DNS_SERVER_1%
network.secondary_dns = %DNS_SERVER_2%

# 0-Disable(default),1-Enable;
```

```
network.static_dns_enable =
```

Appendix B: %TIMEZONENAME% Values

Time Zone	Time Zone Name
-11:00	Samoa
-10:00	United States-Hawaii-Aleutian
-10:00	United States-Alaska-Aleutian
-09:00	United States-Alaska Time
-08:00	Canada (Vancouver, Whitehorse)
-08:00	Mexico (Tijuana, Mexicali)
-08:00	United States-Pacific Time
-07:00	Canada (Edmonton, Calgary)
-07:00	Mexico (Mazatlan, Chihuahua)
-07:00	United States-Mountain Time
-07:00	United States-MST no DST
-06:00	Canada-Manitoba (Winnipeg)
-06:00	Chile (Easter Islands)
-06:00	Mexico (Mexico City, Acapulco)
-06:00	United States-Central Time
-05:00	Bahamas (Nassau)
-05:00	Canada (Montreal, Ottawa, Quebec)
-05:00	Cuba (Havana)
-05:00	United States-Eastern Time
-04:30	Venezuela (Caracas)
-04:00	Canada (Halifax, Saint John)
-04:00	Chile (Santiago)
-04:00	Paraguay (Asuncion)
-04:00	United Kingdom-Bermuda (Bermuda)
-04:00	United Kingdom (Falkland Islands)
-04:00	Trinidad Tobago
-03:30	Canada-Newfoundland (St. Johns)
-03:00	Denmark-Greenland (Nuuk)
-03:00	Argentina (Buenos Aires)
-03:00	Brazil (no DST)
-03:00	Brazil (DST)
-02:00	Brazil (no DST)
-01:00	Portugal (Azores)

Time Zone	Time Zone Name
0	GMT
0	Greenland
0	Denmark-Faroe Islands (Torshavn)
0	Ireland (Dublin)
0	Portugal (Lisboa, Porto, Funchal)
0	Spain-Canary Islands (Las Palmas) Administrator's Guide for SIP-W52P IP DECT PHONES
0	United Kingdom (London)
0	Morocco
+01:00	Albania (Tirane)
+01:00	Austria (Vienna)
+01:00	Belgium (Brussels)
+01:00	Caicos
+01:00	Chad
+01:00	Croatia (Zagreb)
+01:00	Czech Republic (Prague)
+01:00	Denmark (Copenhagen)
+01:00	France (Paris)
+01:00	Germany (Berlin)
+01:00	Hungary (Budapest)
+01:00	Italy (Rome)
+01:00	Luxembourg (Luxembourg)
+01:00	Macedonia (Skopje)
+01:00	Netherlands (Amsterdam)
+01:00	Namibia (Windhoek)
+02:00	Estonia (Tallinn)
+02:00	Finland (Helsinki)
+02:00	Gaza Strip (Gaza)
+02:00	Greece (Athens)
+02:00	Jordan (Amman)
+02:00	Latvia (Riga)
+02:00	Lebanon (Beirut)
+02:00	Moldova (Kishinev)
+02:00	Russia (Kaliningrad)
+02:00	Romania (Bucharest)
+02:00	Turkey (Ankara)
+02:00	Ukraine (Kyiv, Odessa)

Time Zone	Time Zone Name
+03:00	East Africa Time
+03:00	Iraq (Baghdad)
+03:00	Russia (Moscow)
+03:30	Iran (Teheran)
+04:00	Armenia (Yerevan)
+04:00	Azerbaijan (Baku)
+04:00	Georgia (Tbilisi)
+04:00	Kazakhstan (Aktau)
+04:00	Russia (Samara)
+04:30	Afghanistan
+05:00	Kazakhstan (Aqtobe)
+05:00	Kyrgyzstan (Bishkek)
+05:00	Pakistan (Islamabad)
+05:00	Russia (Chelyabinsk)
+05:30	India (Calcutta)
+06:00	Kazakhstan (Astana, Almaty)
+06:00	Russia (Novosibirsk, Omsk)
+07:00	Russia (Krasnoyarsk)
+07:00	Thailand (Bangkok)
+08:00	China (Beijing)
+08:00	Singapore (Singapore)
+08:00	Australia (Perth)
+09:00	Korea (Seoul)
+09:00	Japan (Tokyo)
+09:30	Australia (Adelaide)
+09:30	Australia (Darwin)
+10:00	Australia (Sydney, Melbourne, Canberra)
+10:00	Australia (Brisbane)
+10:00	Australia (Hobart)
+10:00	Russia (Vladivostok)
+10:30	Australia (Lord Howe Islands)
+11:00	New Caledonia (Noumea)
+12:00	New Zealand (Wellington, Auckland)
+12:45	New Zealand (Chatham Islands)

References

- [1] Yealink, Inc. 2015. *Yealink W52P IP DECT PHONE User Guide, Release 80*. Available from Yealink at <http://www.yealink.com/DocumentDownload.aspx?CatId=142&flag=142>.
- [2] BroadSoft, Inc. 2016. *BroadWorks Device Management Configuration Guide, Release 21.0*. Available from BroadSoft at xchange.broadsoft.com.
- [3] BroadSoft, Inc. 2015. *BroadWorks Redundancy Guide, Release 21.0*. Available from BroadSoft at xchange.broadsoft.com.
- [4] BroadSoft, Inc. 2016. *BroadWorks SIP Access Interface Interworking Guide, Release 21.0*. Available from BroadSoft at xchange.broadsoft.com.
- [5] BroadSoft, Inc. 2016. *BroadWorks SIP Phone Interoperability Test Plan, Release 21.0*. Available from BroadSoft at xchange.broadsoft.com.
- [6] BroadSoft, Inc. 2015. *BroadWorks SIP Phone Functional Test Plan, Release 21.0*. Available from BroadSoft at xchange.broadsoft.com.
- [7] BroadSoft, Inc. 2016. *BroadWorks Device Management Interoperability Test Plan, Release 21.0*. Available from BroadSoft at xchange.broadsoft.com.
- [8] BroadSoft, Inc. 2015. *BroadWorks CPE Kit Usage Guide, Release 21.0*. Available from BroadSoft at xchange.broadsoft.com.